





**FaxBack Document
Retrieval System for TVIP
Installation Instructions,
Owner's Guides, etc.**


Thank you for using the Fujitsu Ten FaxBack document retrieval system! This system is configured to send no more than four faxes per month to a particular phone number. If you need technical assistance, please call (800) 237-5413 and ask for TVIP technical assistance.

4RUNNER RS3200 PLUS

• 4 RUNNER •
RS3200 PLUS
CONNECTORS

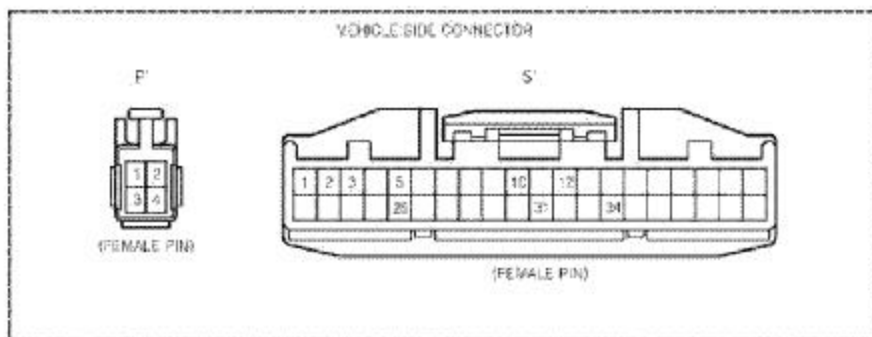
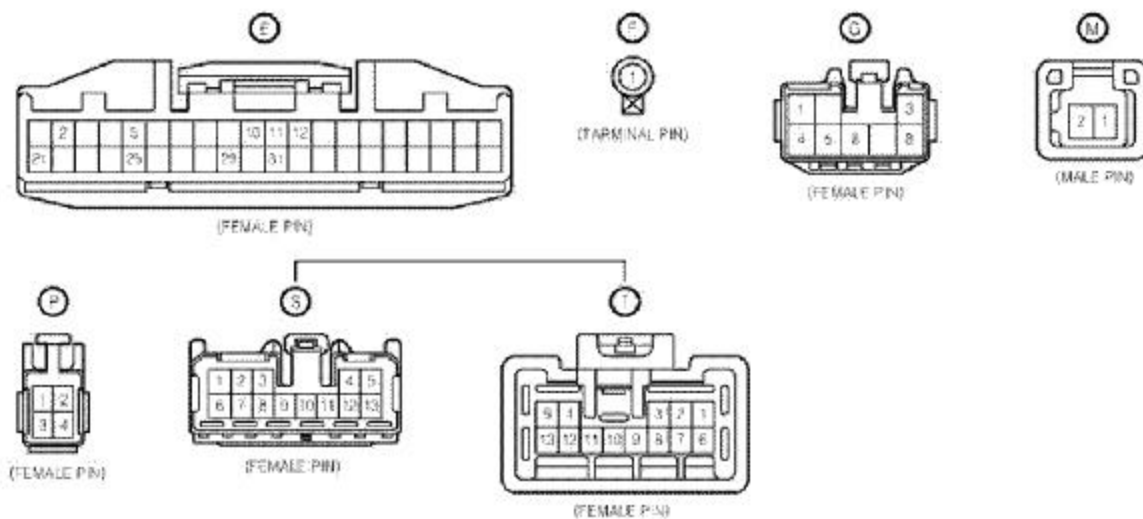


4RUNNER RS3200 PLUS

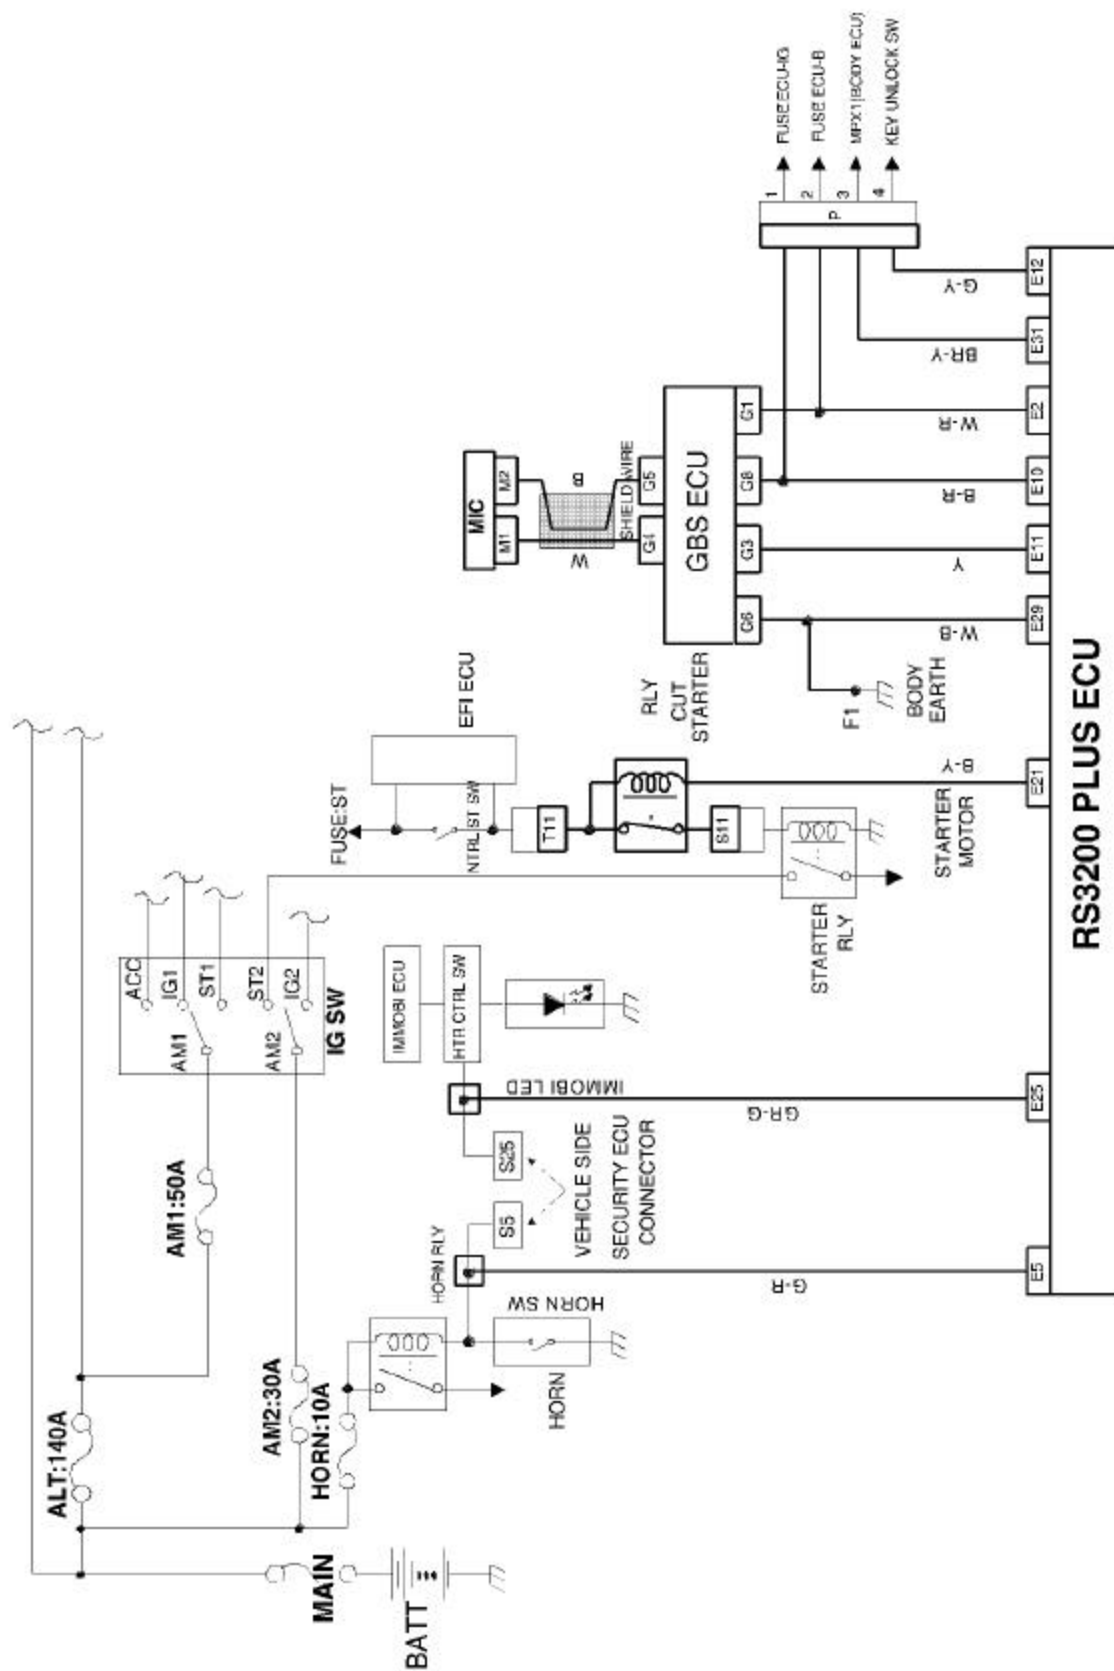


• 4 RUNNER •
RS3200 PLUS EWD

AVALON GBS

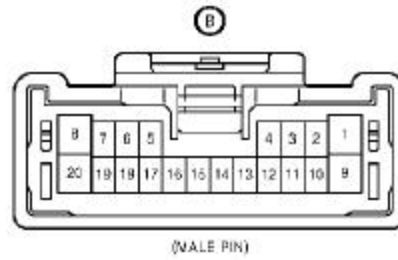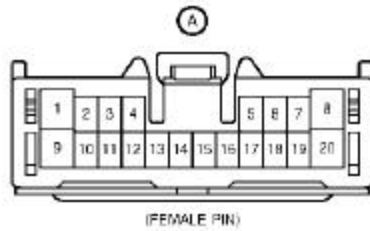


• AVALON •
GBS
CONNECTORS

• AVALON •
GBS EWD

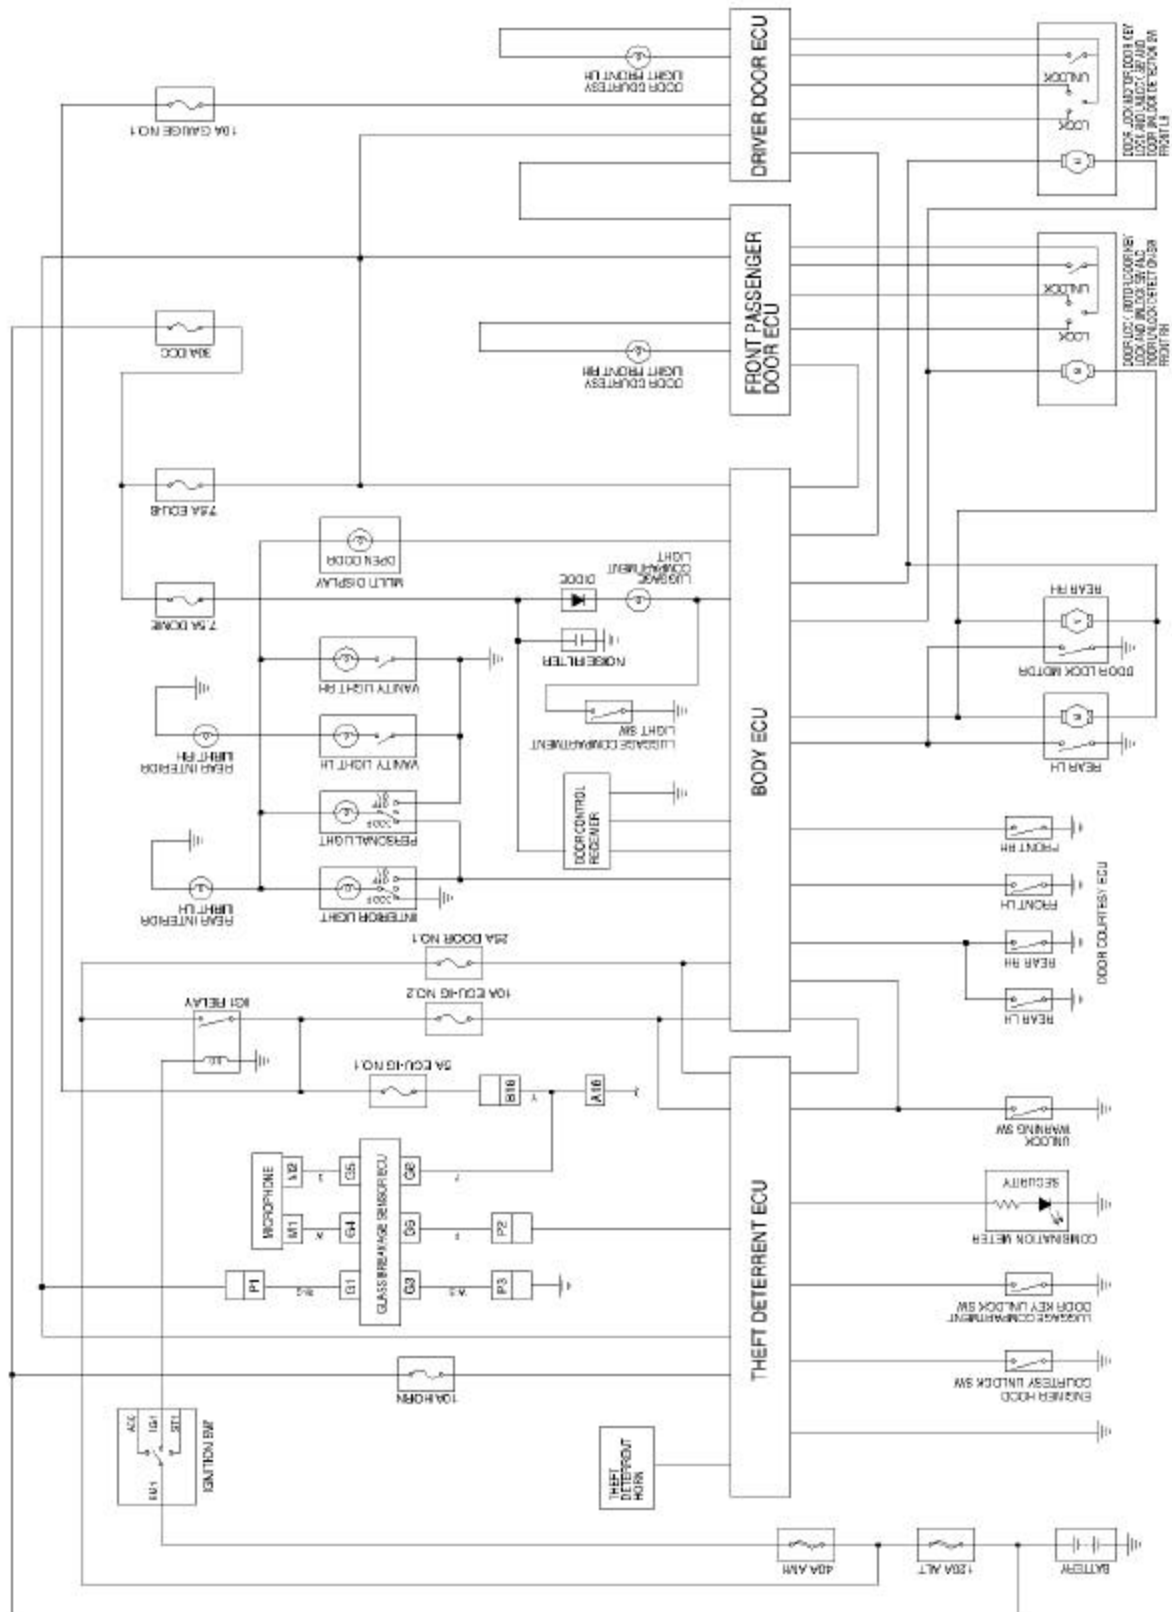

AVALON RS3200 PLUS

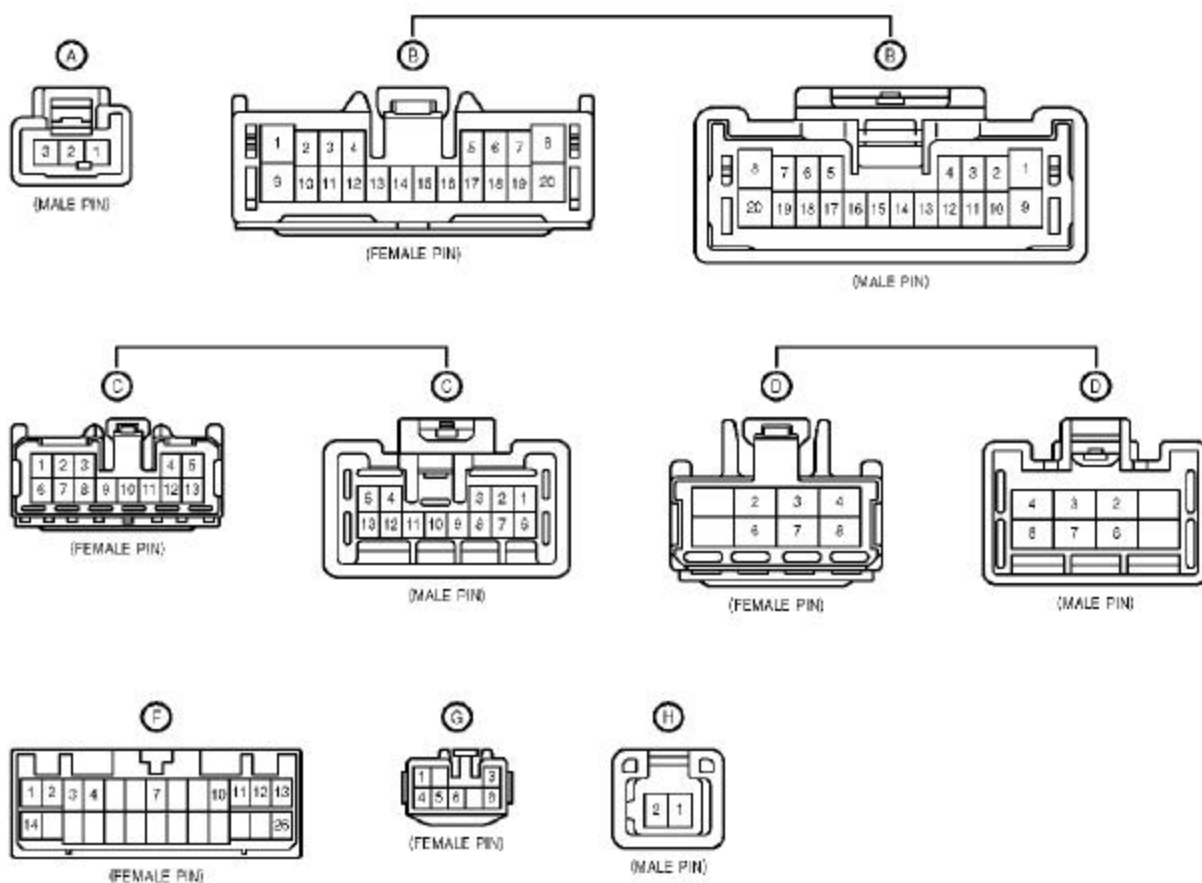


• AVALON •
RS3200 PLUS
CONNECTORS


[illegible]

- AVALON •
RS3200 PLUS EWD

CAMRY GBS

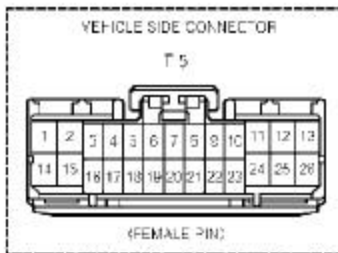


CAMRY GBS

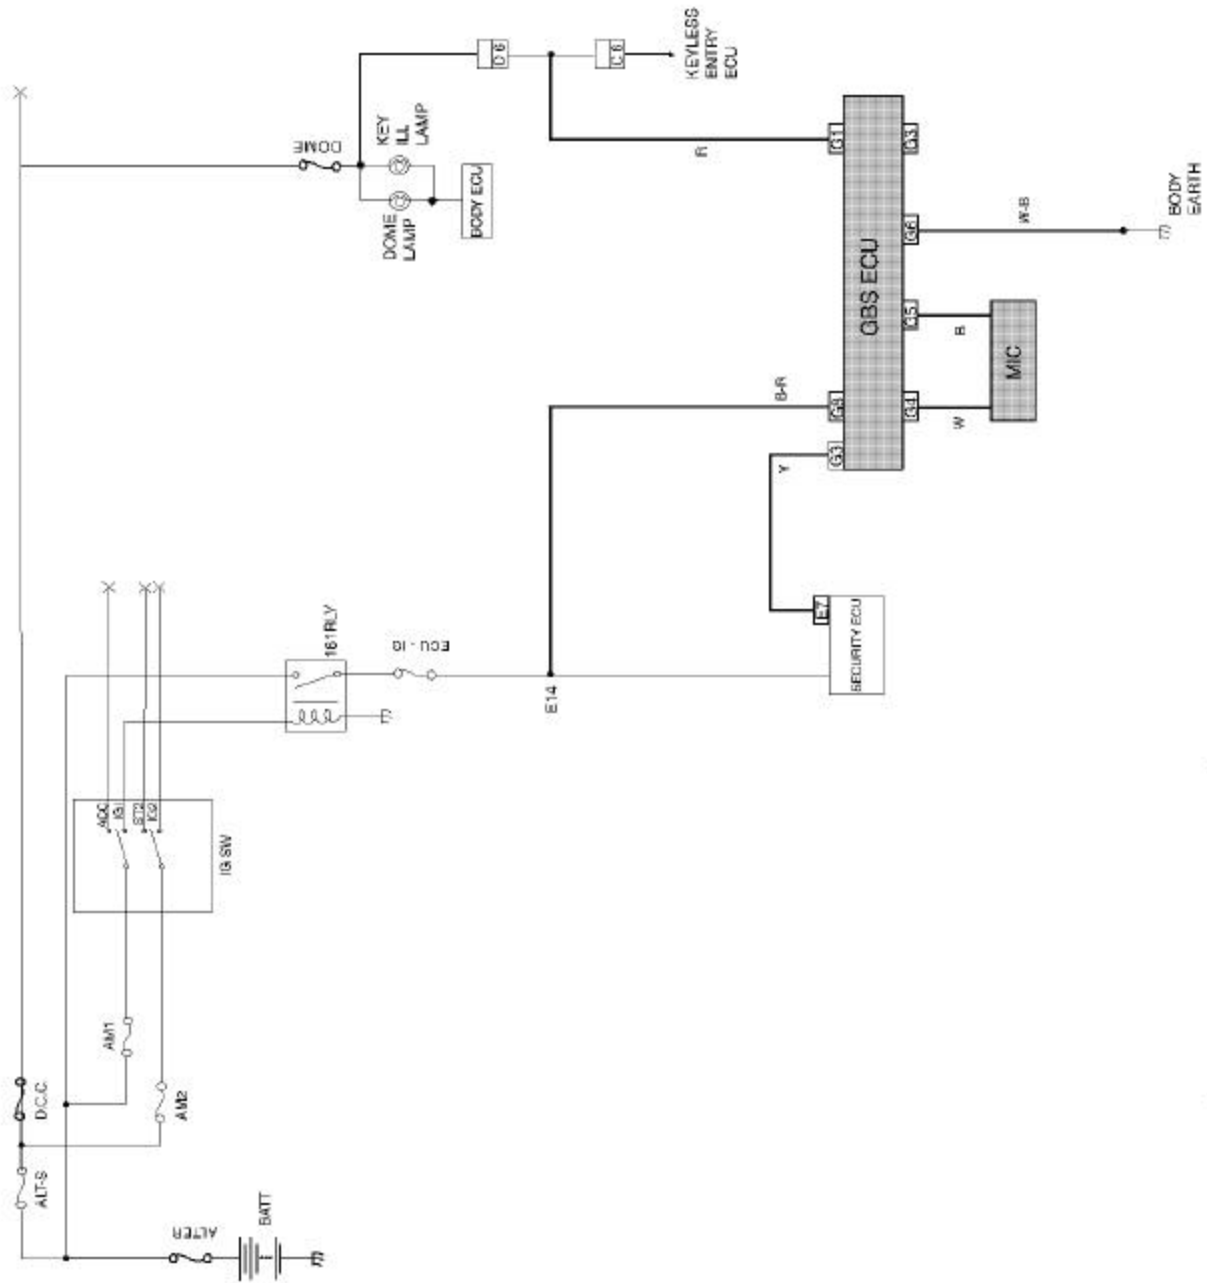

• CAMRY •
GBS EWD


CAMRY RS3200

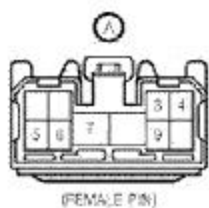


(FEMALE PIN)




SCALE P150

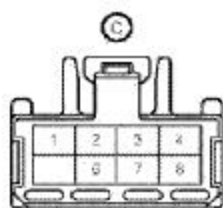


(FEMALE PIV)

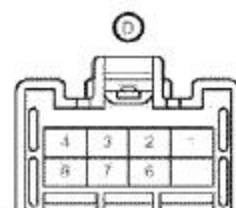

MALE PHO

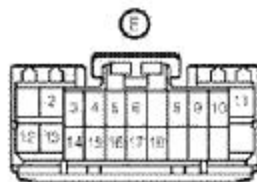

FEMALE PINO

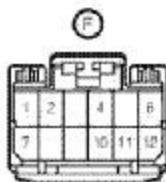


(FEMALE PIN)




FEMALE: PVI)




FEMALE PREG



(MOLE PHO)

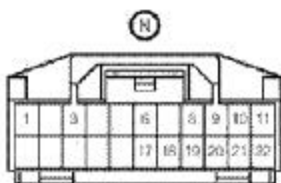


(FENAE, FEN)

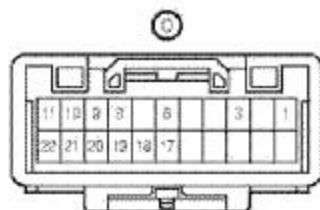


MALE PINI




MALE PINO

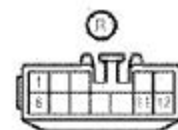

FEMALE P28)

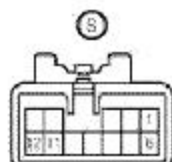

(NALF PH)

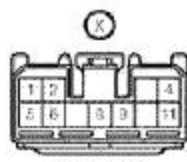

(FEMALE F-41)



MALE PIN)




(FEMALE F 04)




DATE PIN)



(TERMINAL PIN)

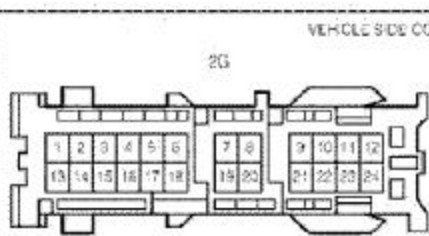


(FEMALE PIN)

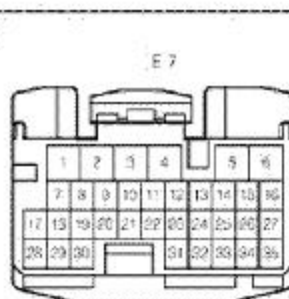

FEMALE ♀♀:




CAMRY RS3200

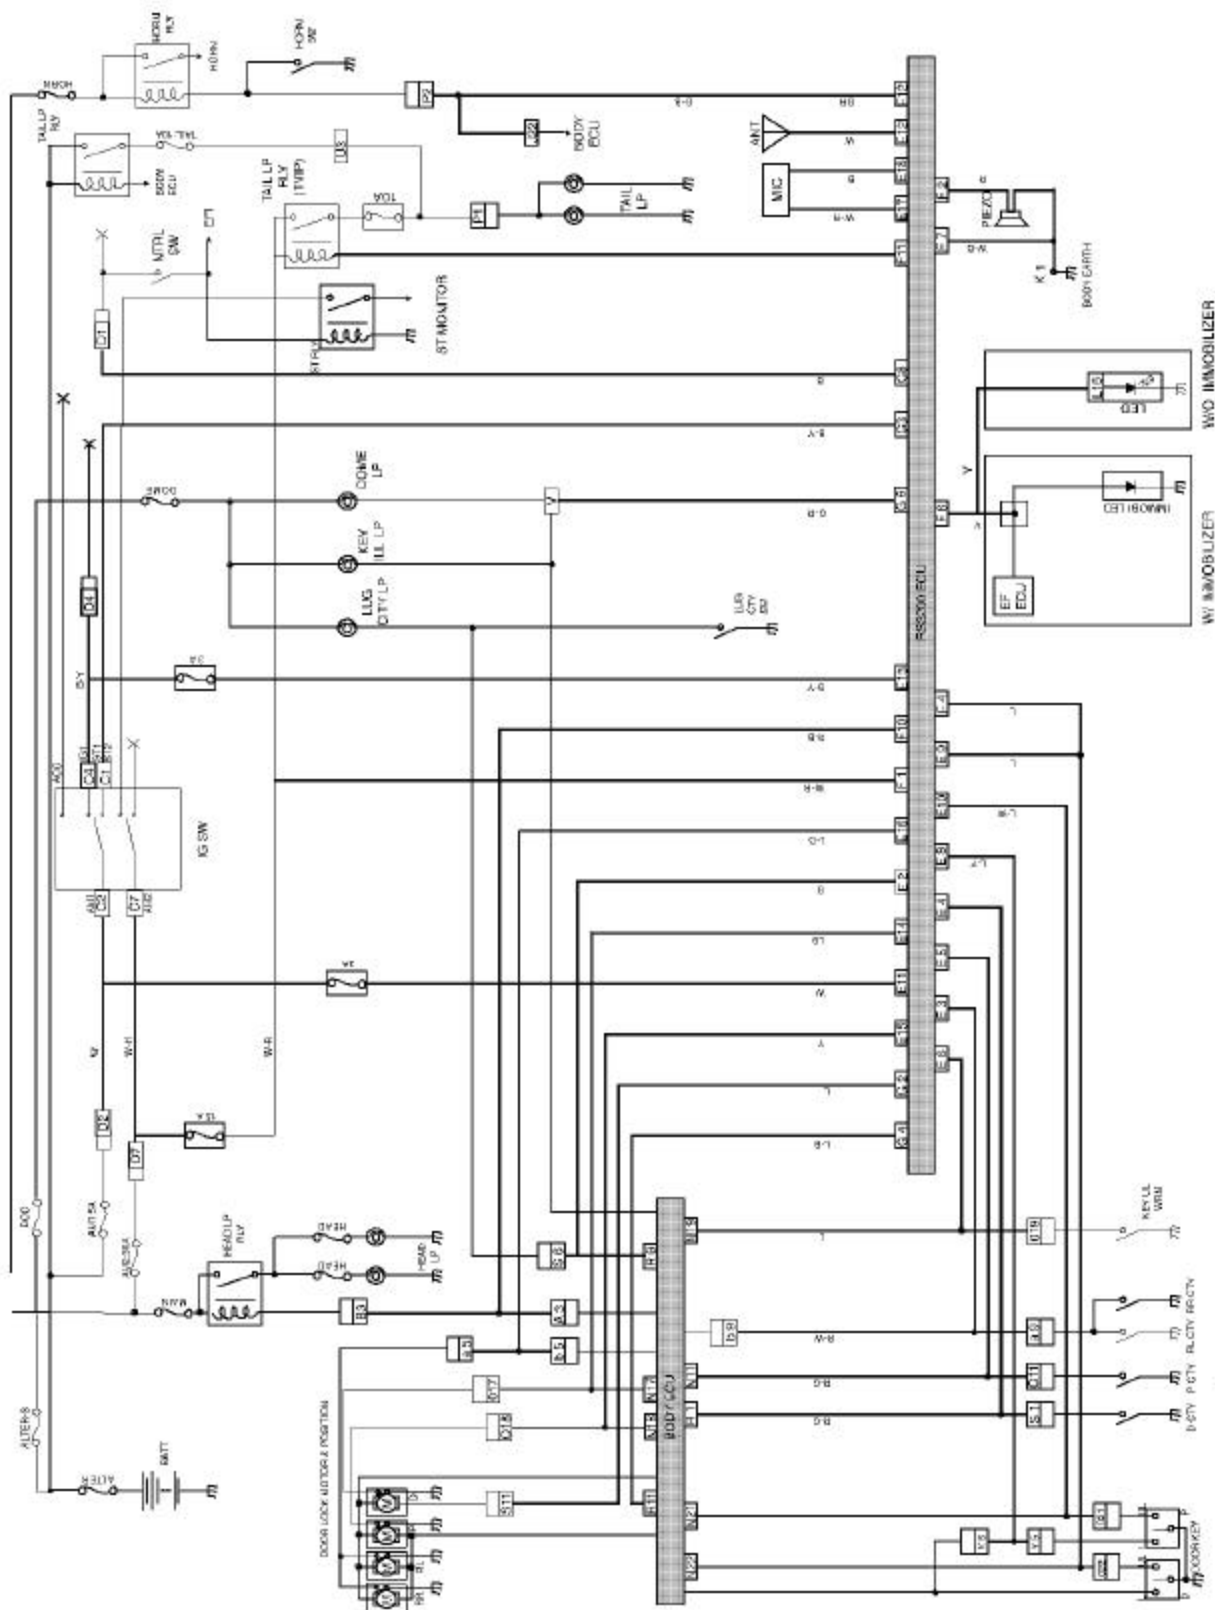


• CAMRY •
RS3200 EWD

CAMRY RS3200 PLUS


• CAMRY •
RS3200 PLUS
CONNECTORS

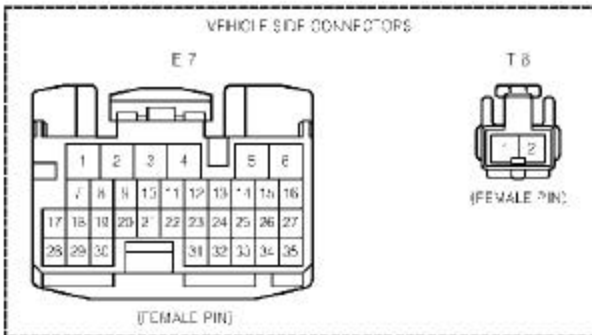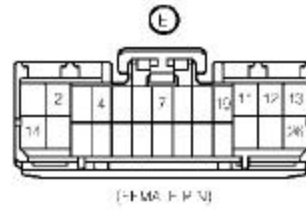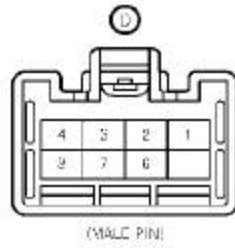

CAMRY RS3200 PLUS

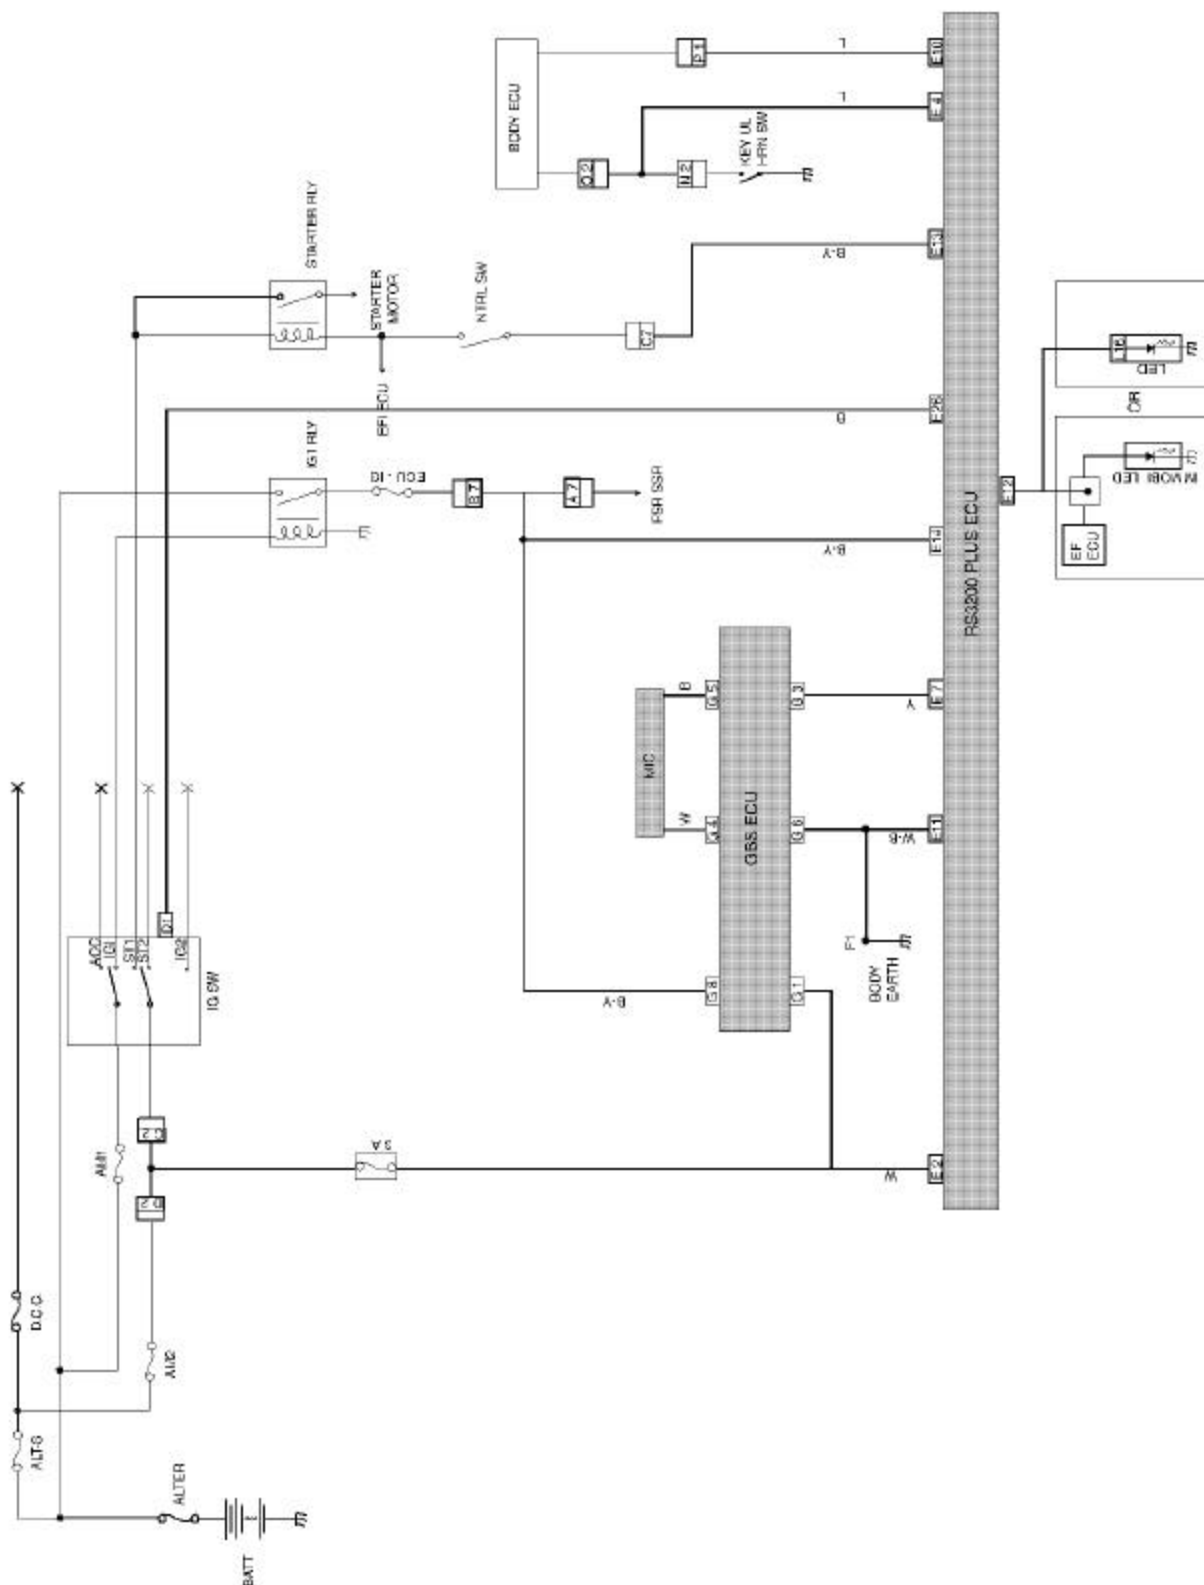


CELICA RS3200

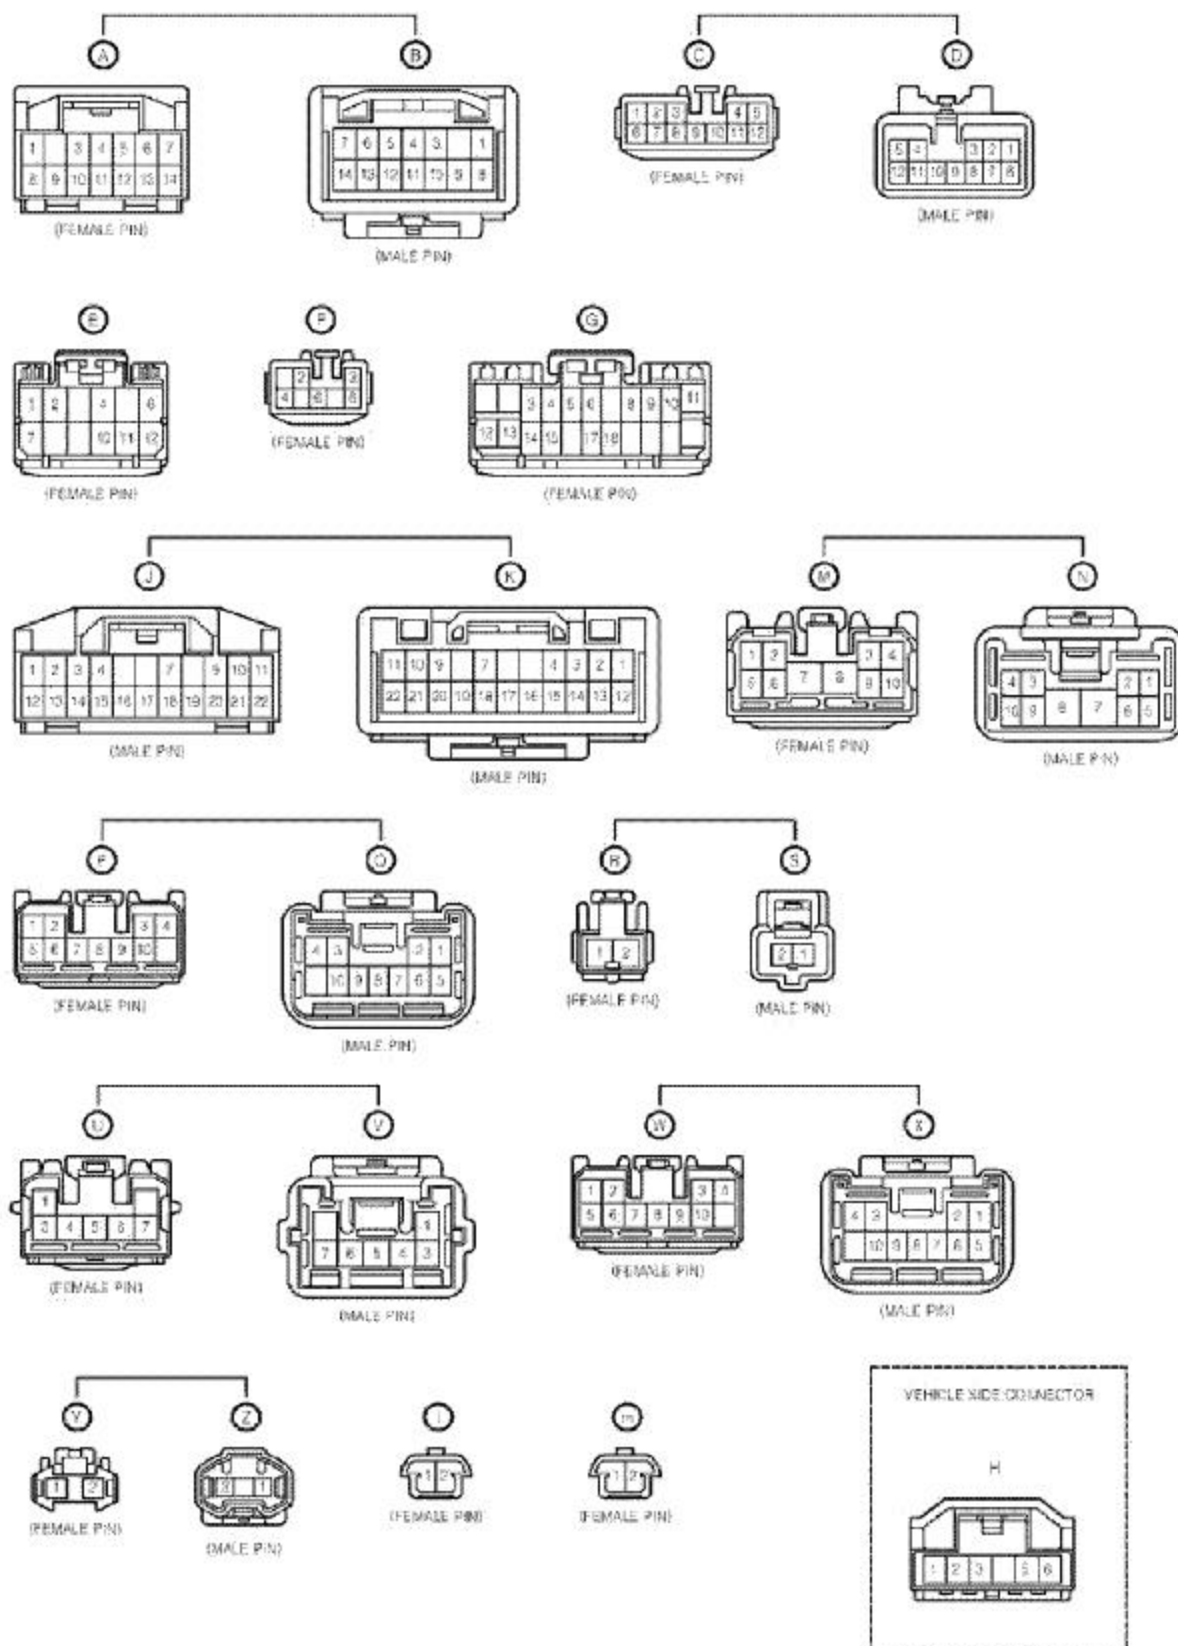


• CELICA •
RS3200
CONNECTORS

CELICA RS3200

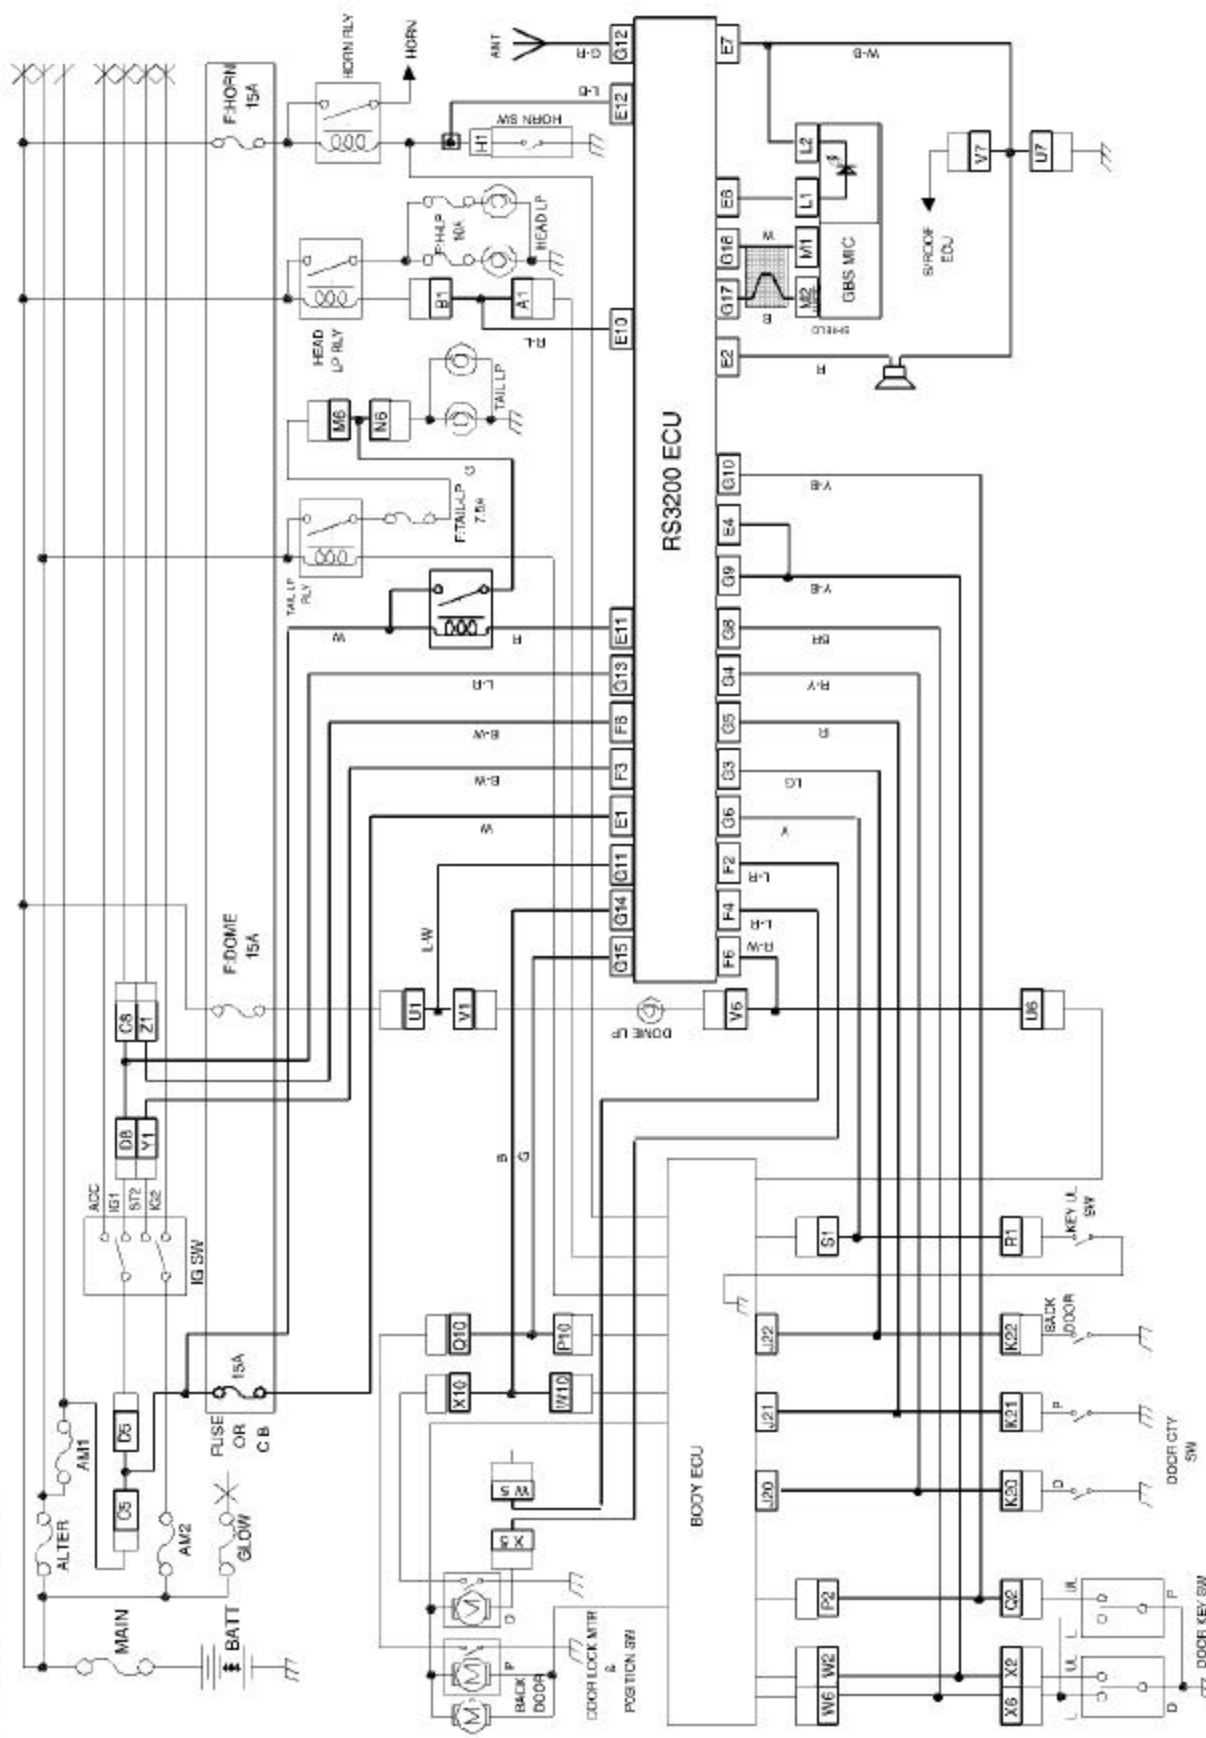


• CELICA •
RS3200 EWD

CELICA RS3200 PLUS

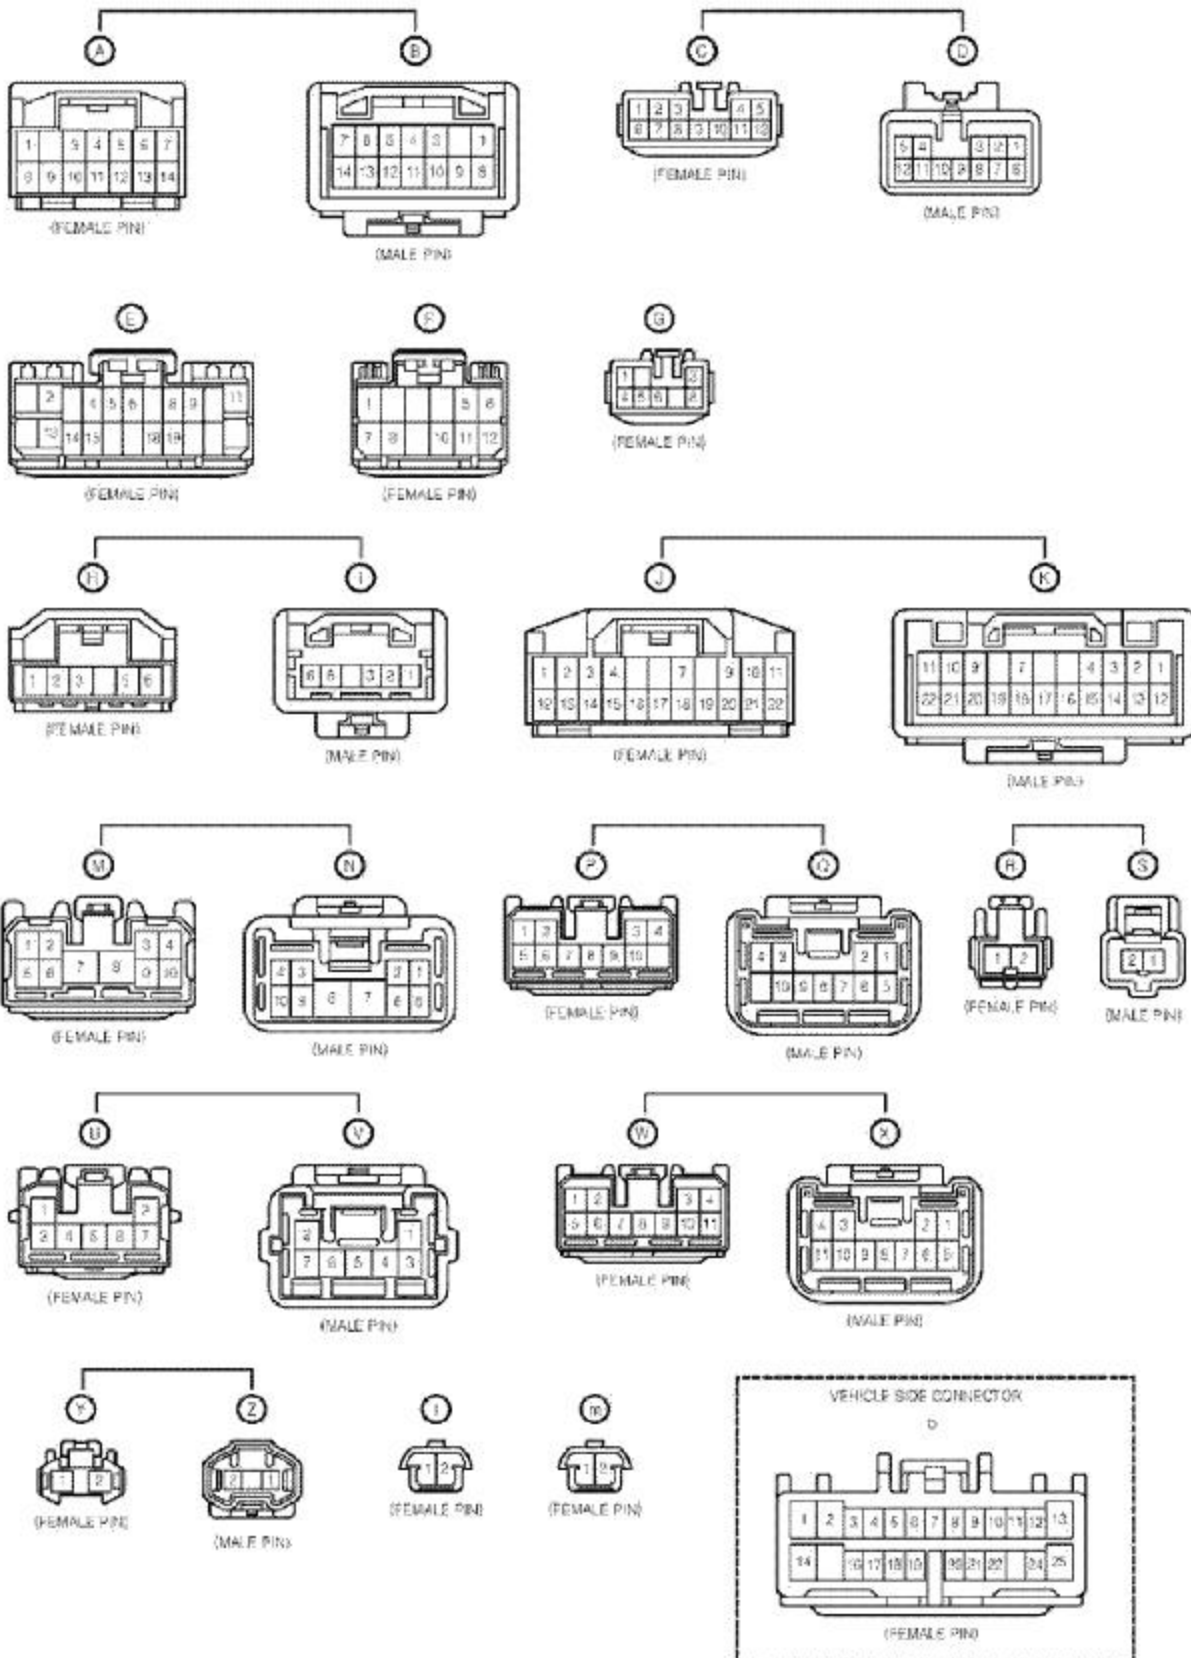


• CELICA •
RS3200 PLUS
CONNECTORS

CELICA RS3200 PLUS

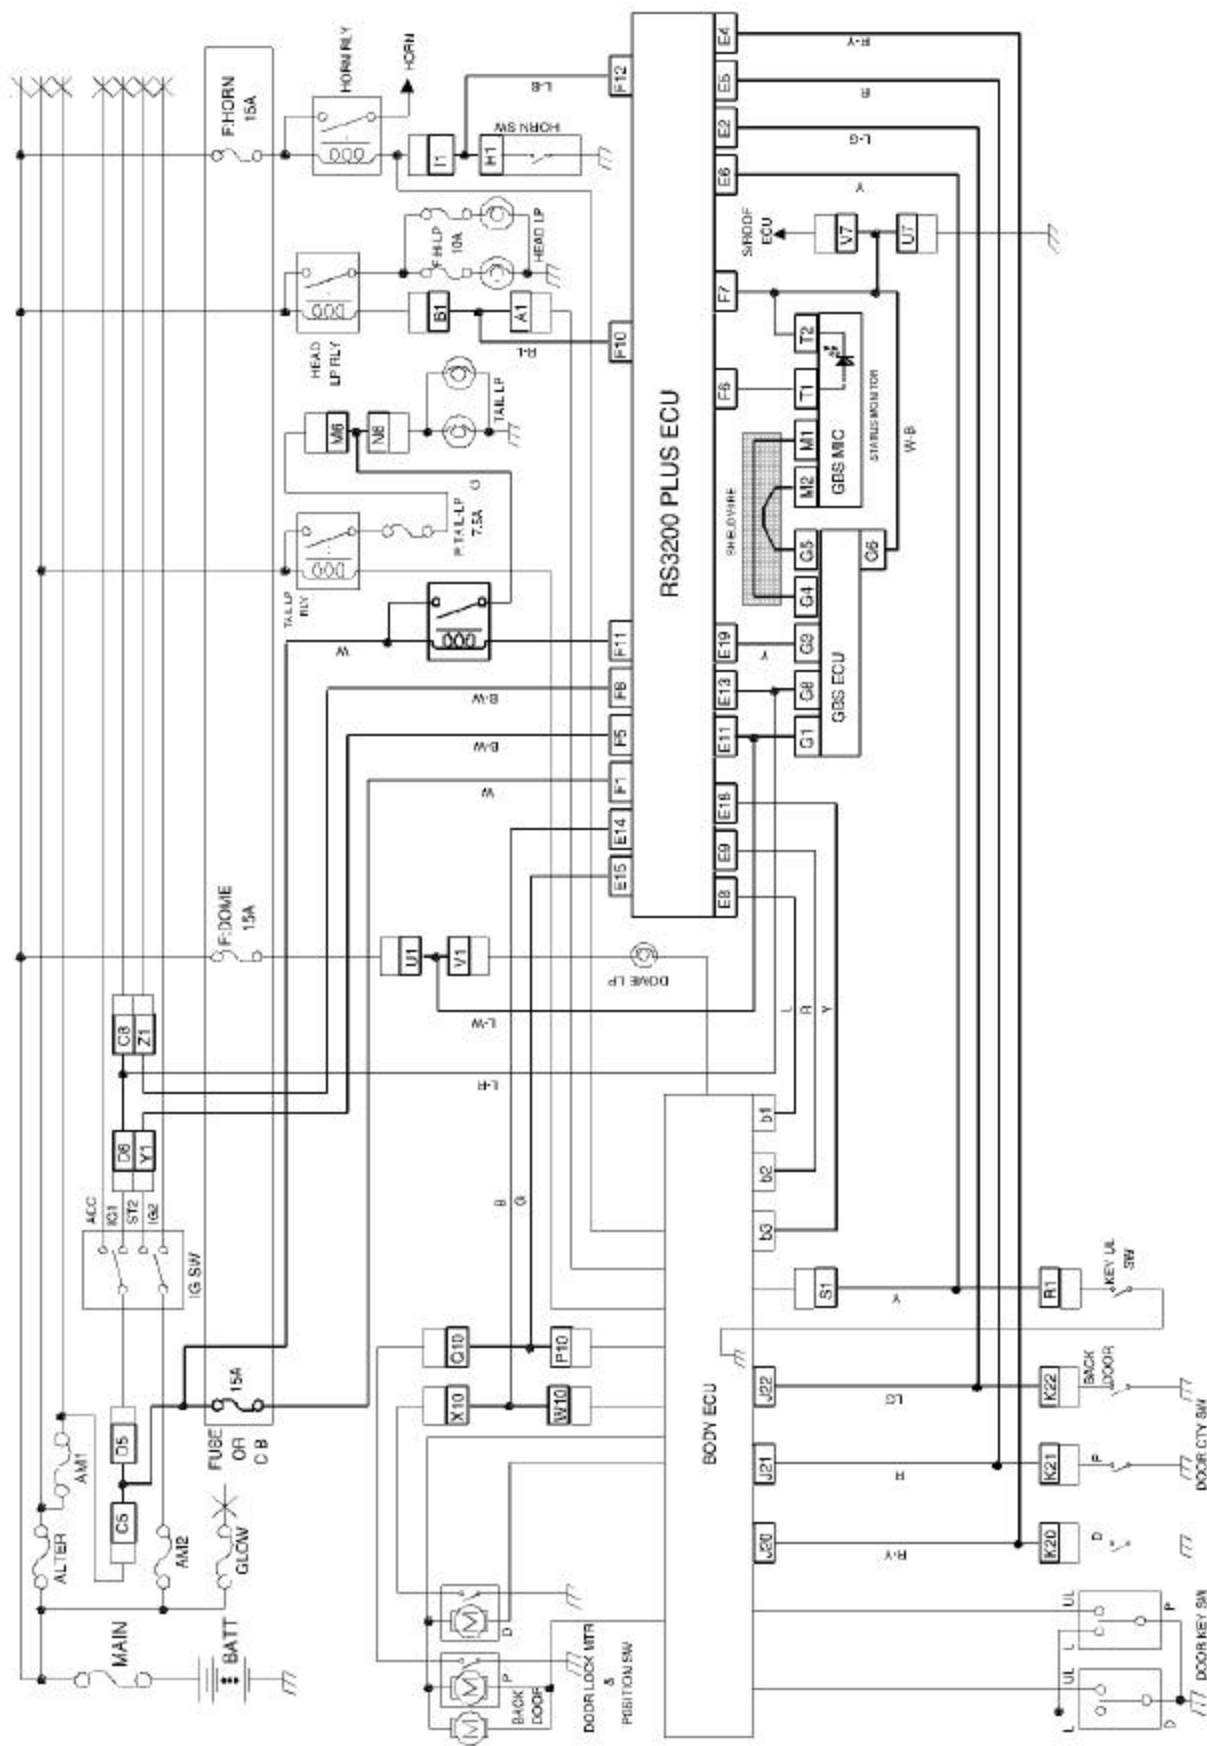


• CELICA •
RS3200 PLUS EWD


COROLLA/ MATRIX RS3200

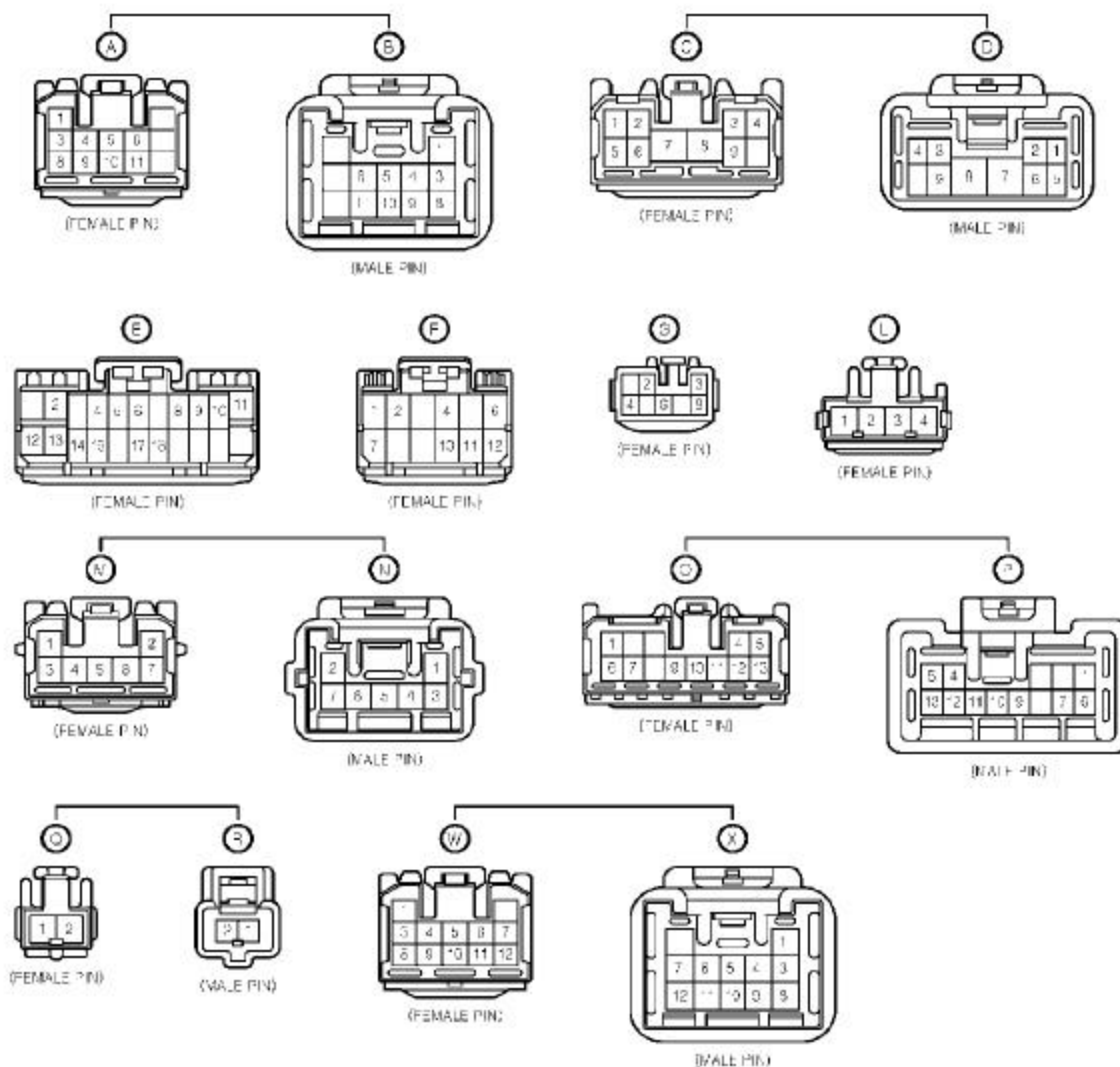

WHICH IS THE CONNECTION

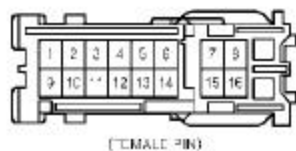

(FEMALE PIN)

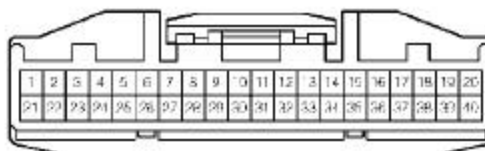

(FEMALE PIN)





(FEMALE PIN)



(FEMALE PIN)

• COROLLA/ MATRIX •
RS3200 EWD

COROLLA/ MATRIX RS3200 PLUS

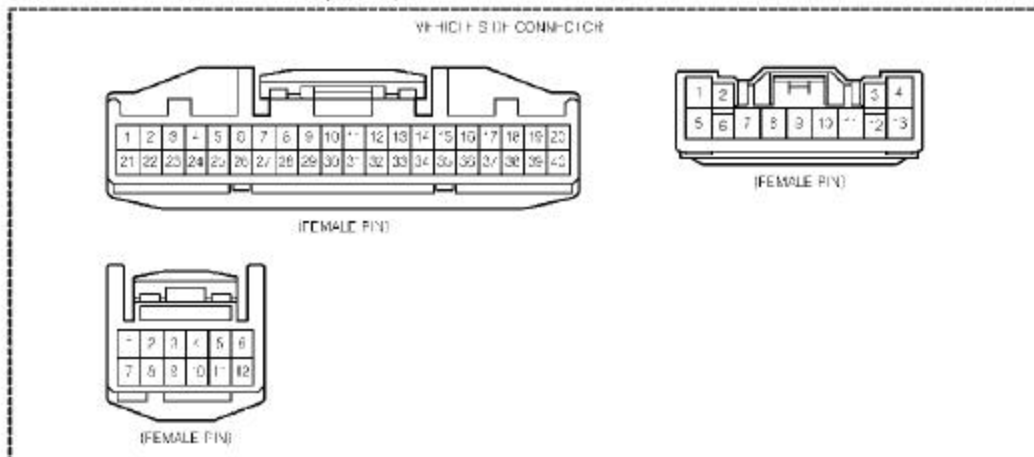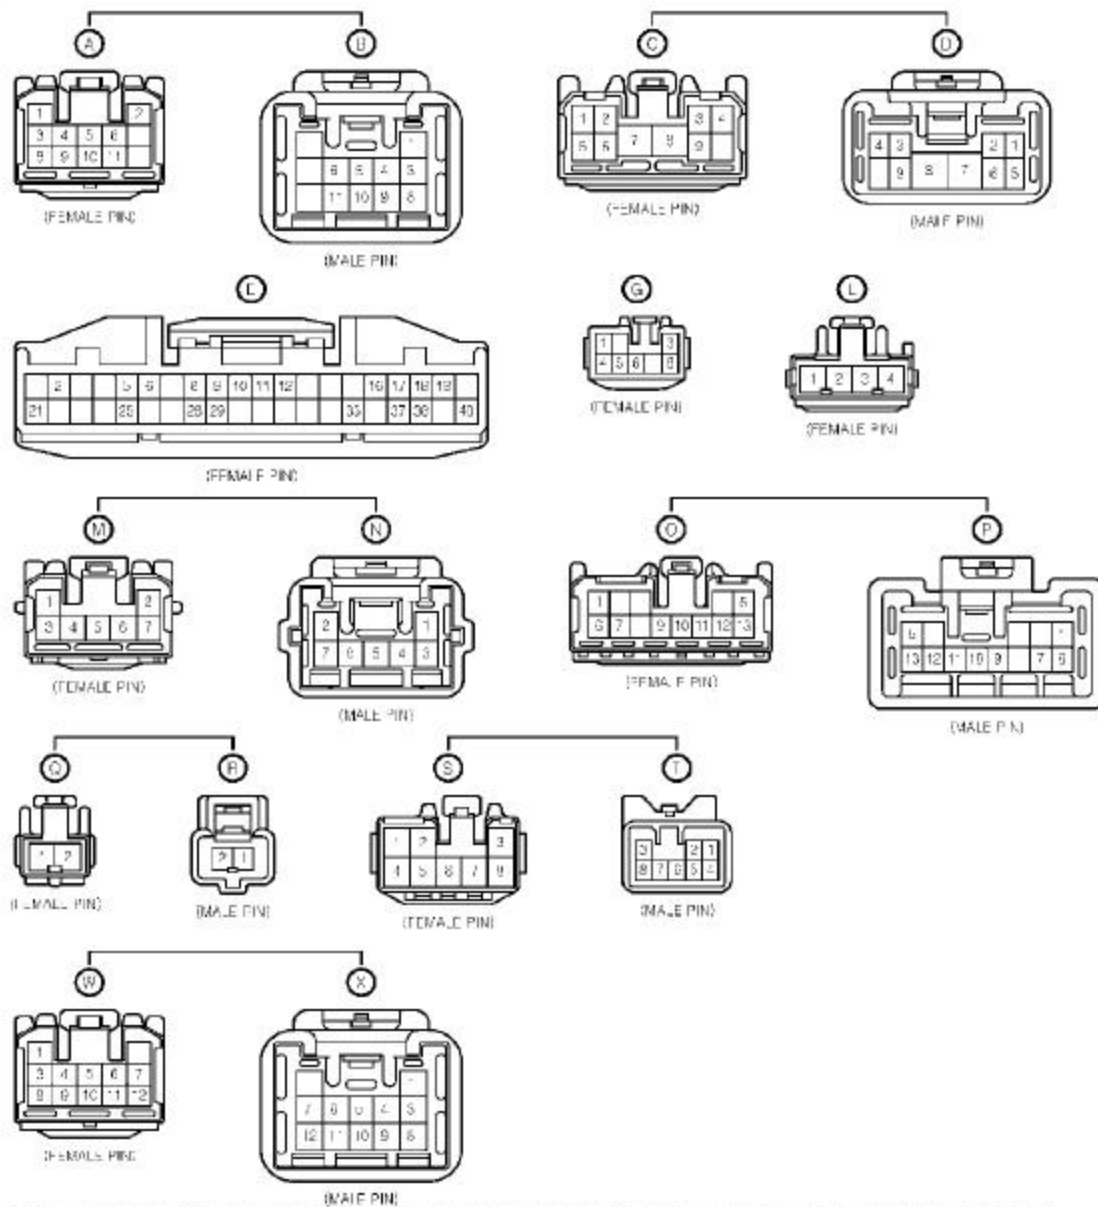


*2 : COROLLA: J20, MATRIX: J20

DOOR KEY LOCK
& UNLOCK SW


• COROLLA/ MATRIX •
RS3200 PLUS EWD

ECHO RS3200

• ECHO •
RS3200
CONNECTORS


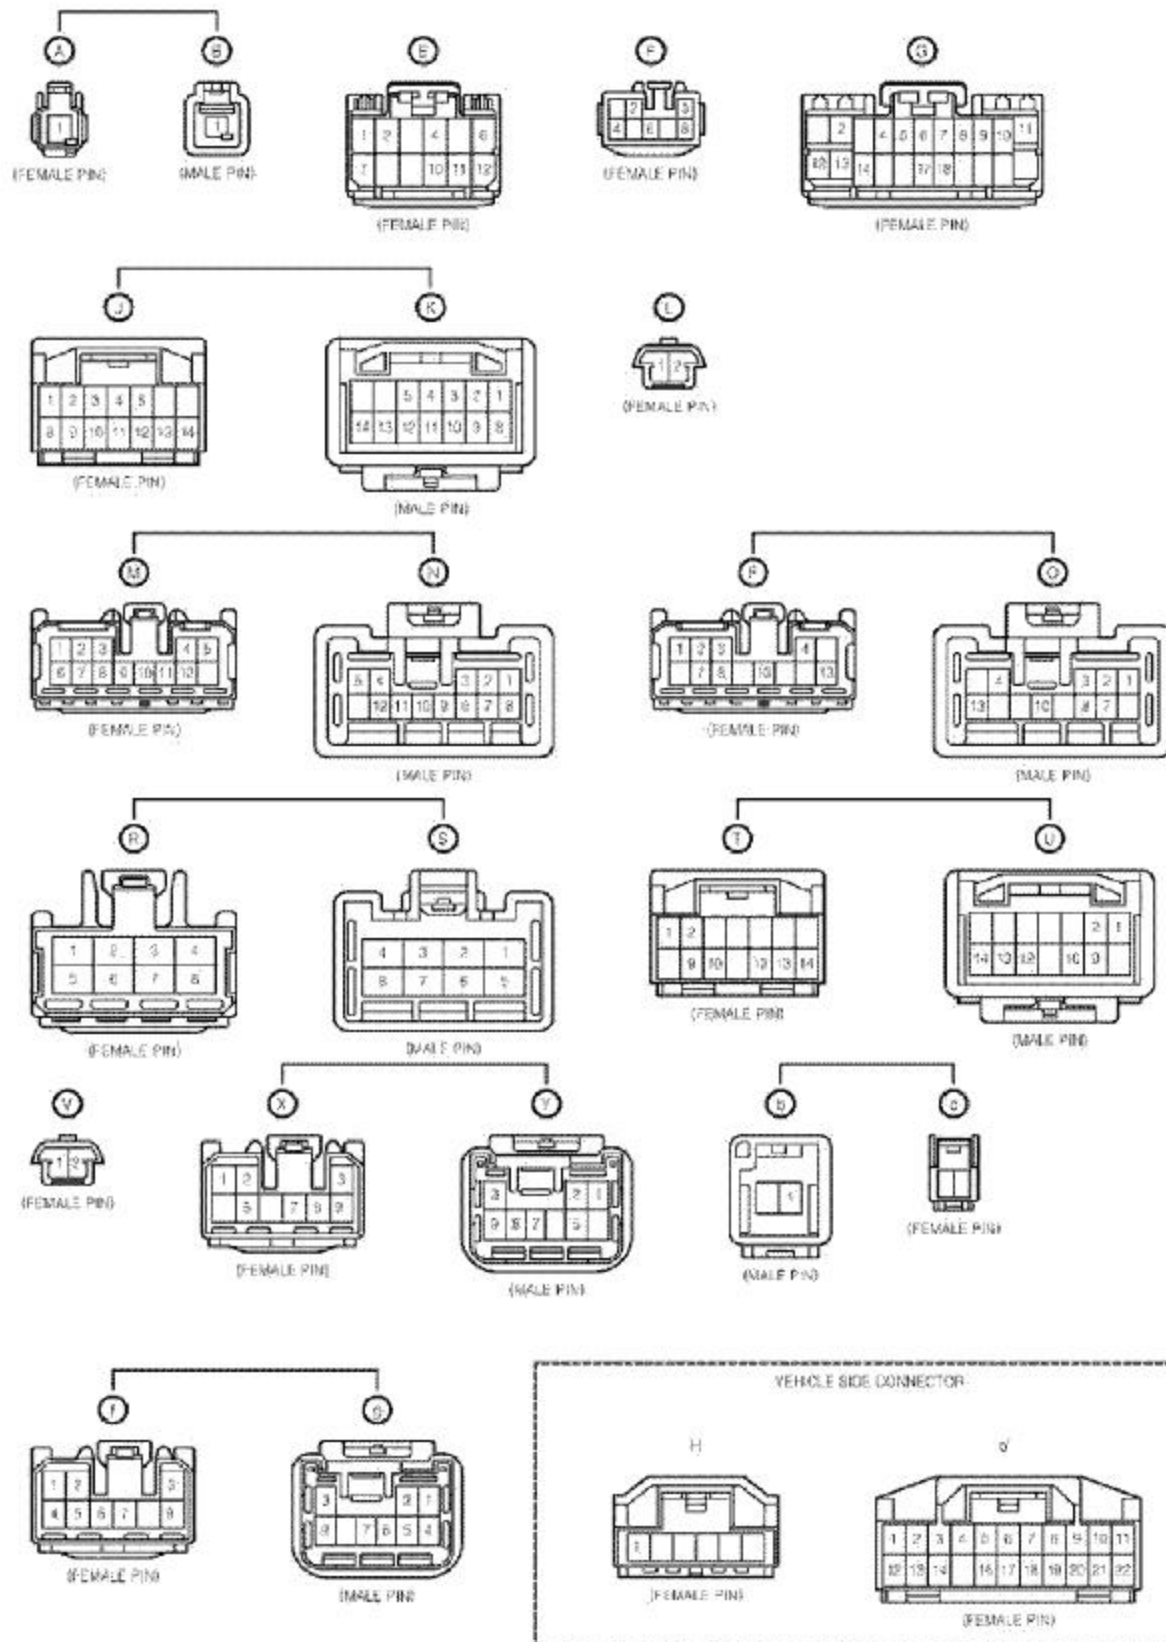


ECHO RS3200

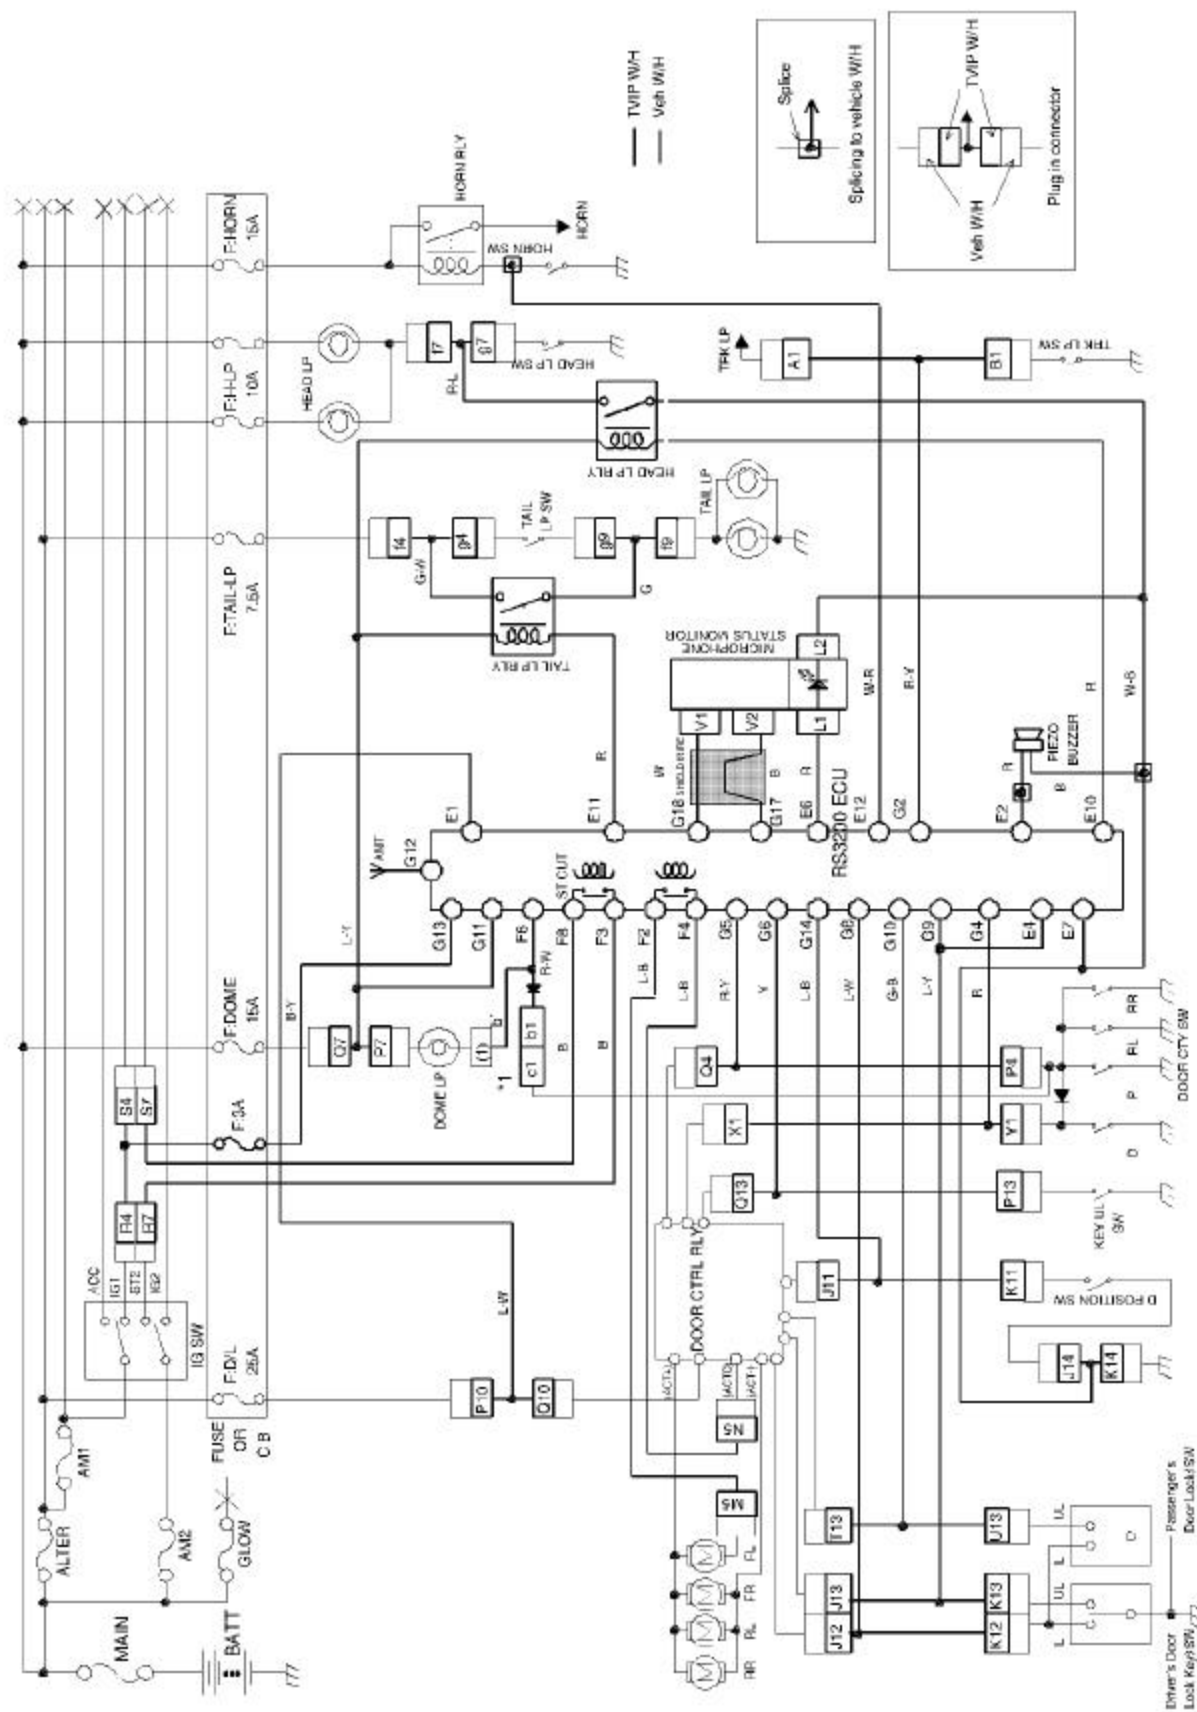

• ECHO •
RS3200 EWD

HIGHLANDER GBS ADD-ON

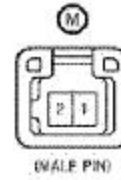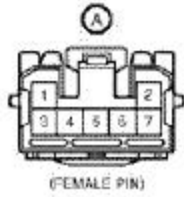








• HIGHLANDER •
GBS ADD-ON
CONNECTORS

The diagram illustrates the 12V engine immobiliser system, showing the following components and their connections:

- Engine Control Module:** Connected to the Body ECU and the Immobiliser Control Unit.
- Body ECU:** Controls various lights and switches, including the Vanity Light, Personal Light, Door Light, and Rear Interior Light.
- Power Window Master:** Controls the Door Key Lock and the Hood Courtesy Switch.
- Theft Deterrent ECU:** Controls the Theft Deterrent Horn and the Theft Deterrent Light.
- Immobiliser Control Unit:** The central unit that manages the system's operation, connected to the Engine Control Module, Body ECU, and various sensors.
- Sensors and Switches:**
 - Door Key Lock:** A switch that controls the Door Key Lock.
 - Hood Courtesy Switch:** A switch that controls the Hood Courtesy Light.
 - Theft Deterrent Horn:** A horn that sounds when the system is armed.
 - Theft Deterrent Light:** A light that illuminates when the system is armed.
 - Door Lock:** A switch that controls the Door Lock.
 - Door Key Lock:** A switch that controls the Door Key Lock.
 - Hood Courtesy Switch:** A switch that controls the Hood Courtesy Light.
 - Theft Deterrent Horn:** A horn that sounds when the system is armed.
 - Theft Deterrent Light:** A light that illuminates when the system is armed.
- Wiring and Fuses:**
 - The system is powered by a 12V battery.
 - Fuses are provided for 15A Security, 7.5A ECU B, and 40A ABS.
 - The wiring is color-coded: Red (R), Blue (B), Green (G), Yellow (Y), and Black (K).


• HIGHLANDER •
GBS ADD-ON EWD

HIGHLANDER RS3200 PLUS

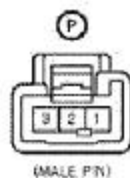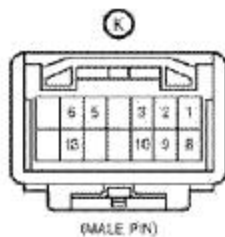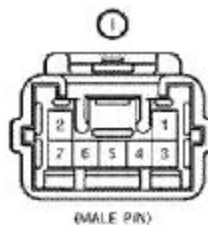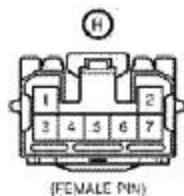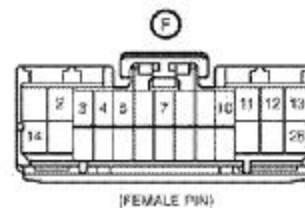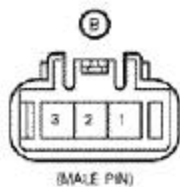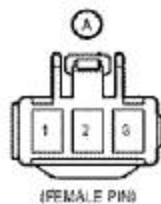

• HIGHLANDER •
RS3200 PLUS
CONNECTORS

• HIGHLANDER •
RS3200 PLUS EWD

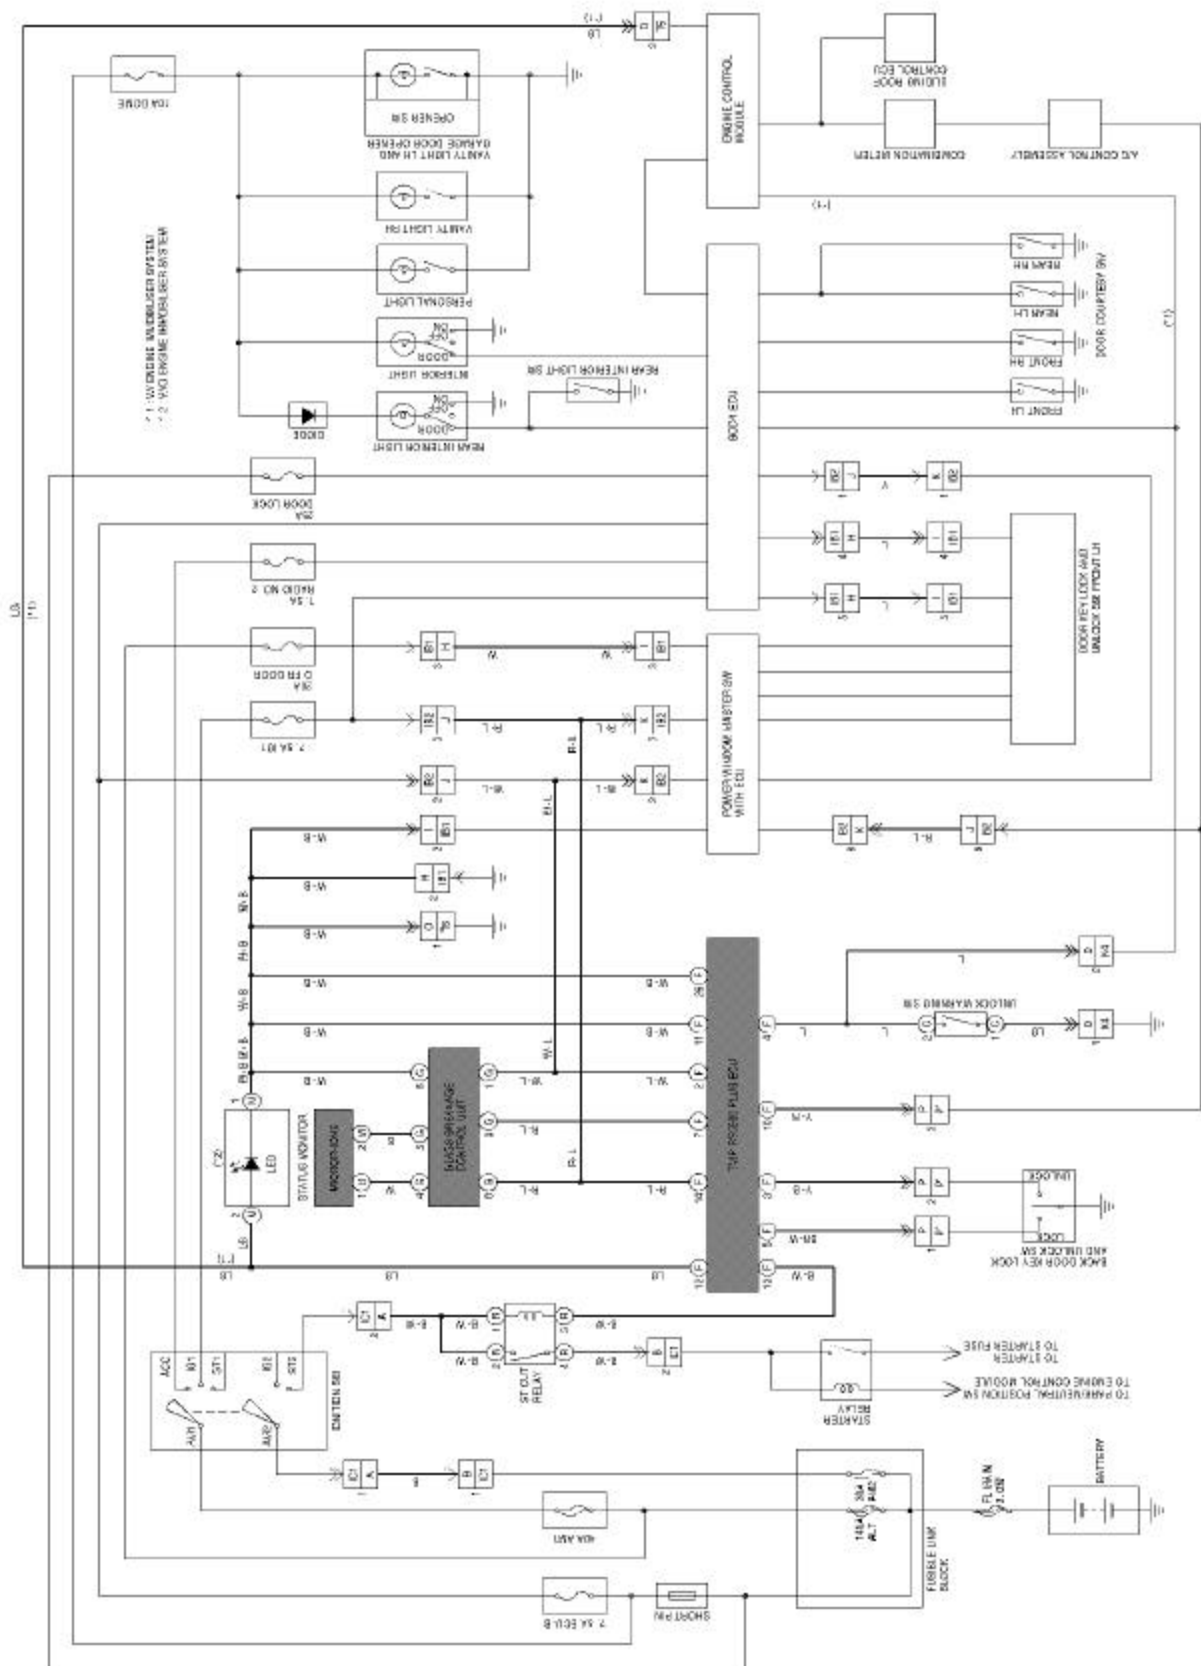

LAND CRUISER GBS



(FEMALE PIN)



(MALE PIN)



(FEMALE PIN)



(MALE PIN)




(MALE PIN)

VEHICLE SIDE CONNECTOR





(FEMALE PIN)

LAND CRUISER GBS

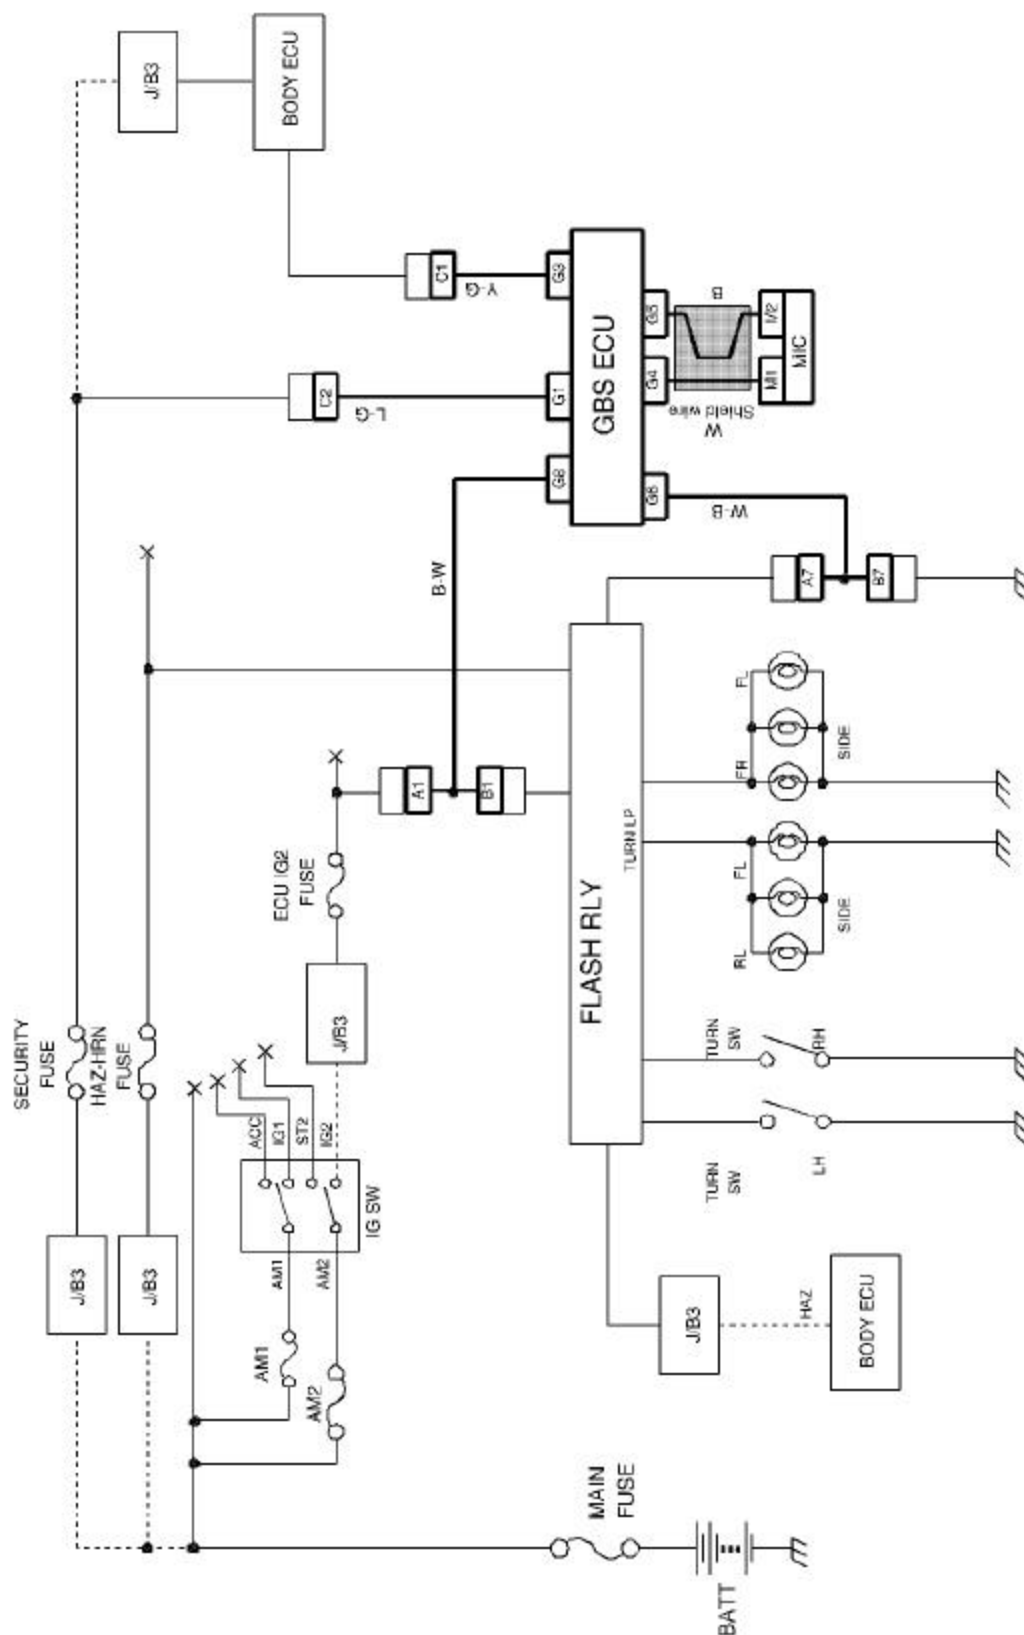

• LAND CRUISER •
GBS EWD

MR2 SPYDER RKE/ RS3200 PLUS UPGRADE

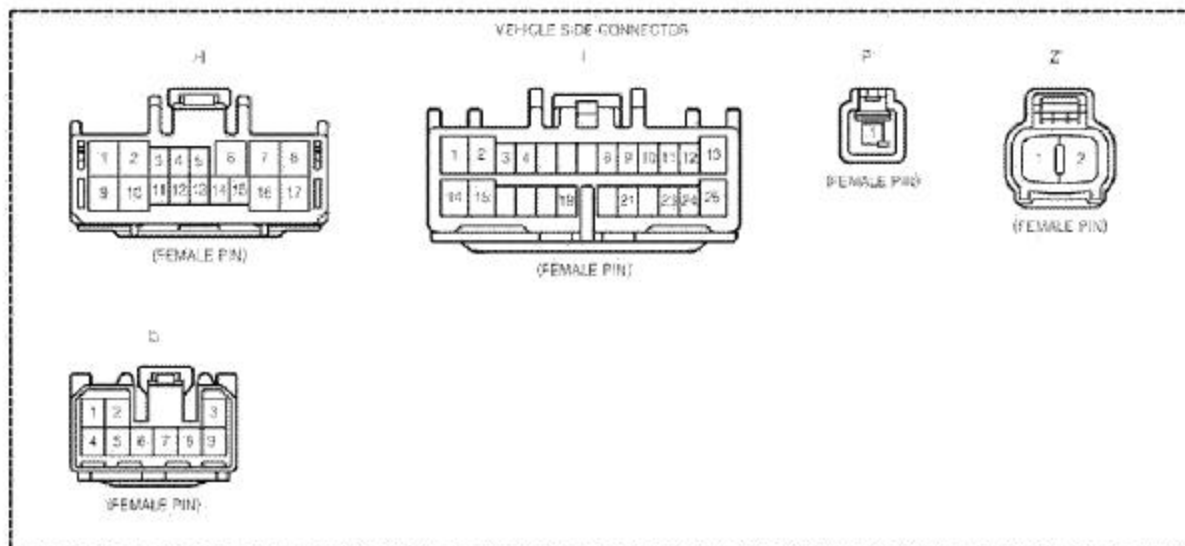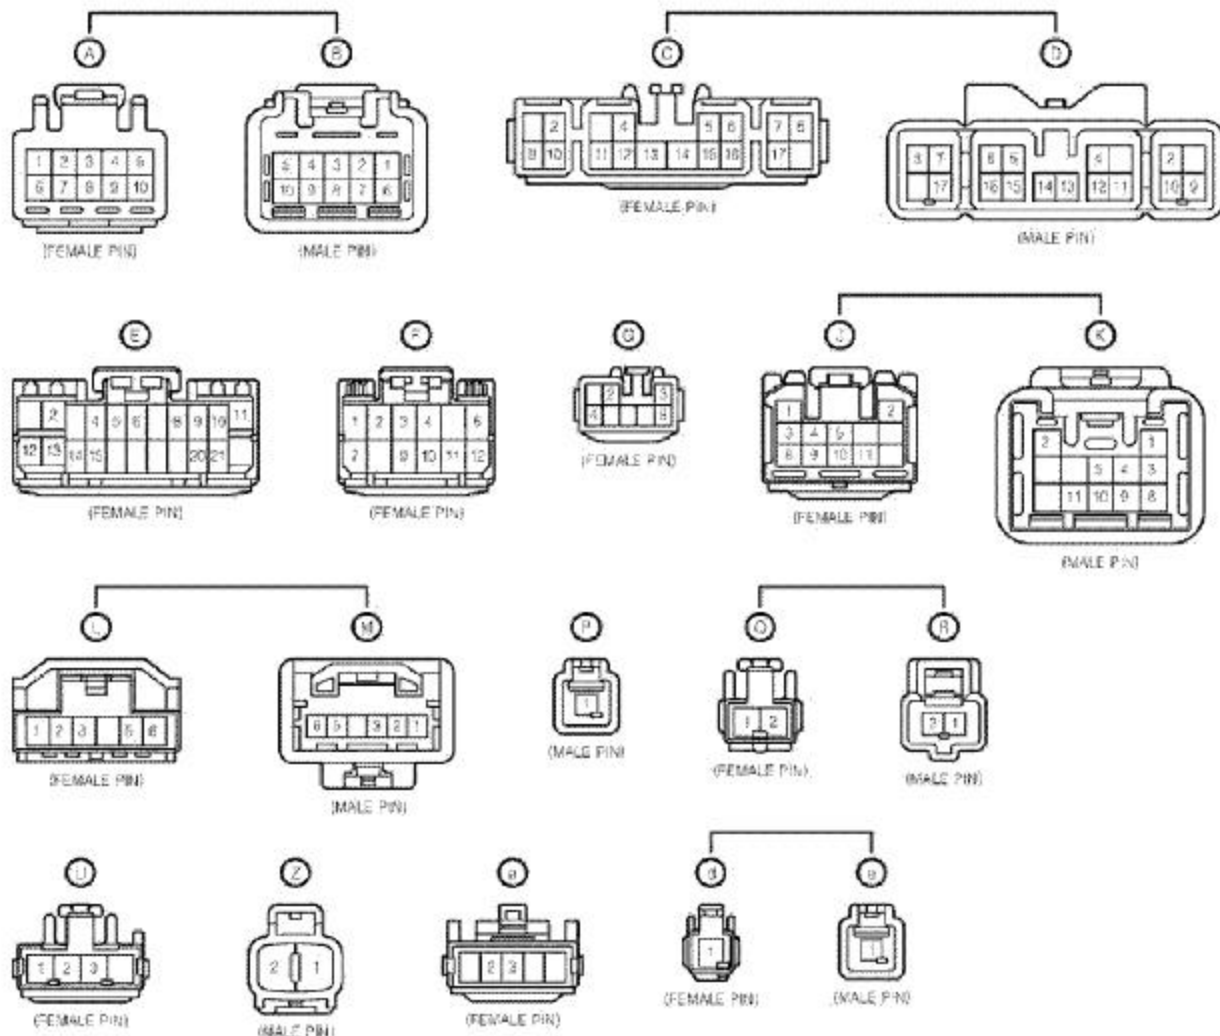

• MR2 SPYDER •
RKE/RS3200 PLUS
UPGRADE
CONNECTORS

The diagram illustrates the electrical architecture of a vehicle, featuring two primary control units:

- RS3200 ECU**: Manages engine-related functions like the RADAR SENSOR, UPGRADe SECURITY, and TRIP FORCE T/A.
- BODY ECU**: Controls body-related systems such as headlights, taillights, horn, and mirrors.





Key components and their connections include:

- Lights**: HEAD LAMP (H-L), HEAD LAMP (H-L), FRONT LH, FRONT RH, REAR LH, REAR RH, HORN SW, 7.5A FUSE, 10A FUSE, 15A FUSE, 20A FUSE, 25A FUSE.
- Relays**: DAYTIME RUNNING LIGHT RELAY, COMBINATION SW, ST RELAY.
- Sensors**: RADAR SENSOR, DOOR LOCK SWITCH, DOOR LOCK MOTOR, DOOR LOCK MOTOR (REVERSE).
- Actuators**: MIRROR (MIR), MIRROR (MIR), MIRROR (MIR), MIRROR (MIR), MIRROR (MIR), MIRROR (MIR).
- Front Luggage Room**: A dedicated section showing connections for the front luggage room light and its associated switch.
- Battery**: Connected to the main power supply via a 7.5A AMP fuse.

- MR2 SPYDER •
RKE/RS3200 PLUS
UPGRADE
EWD

PRIUS GBS ADD-ON









• PRIUS •
GBS ADD-ON
CONNECTORS

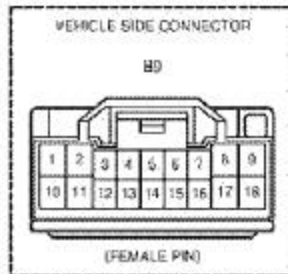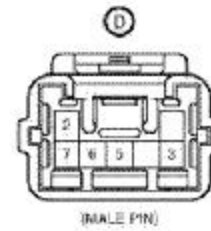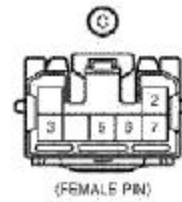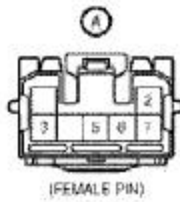

[illegible]


• PRIUS •
GBS ADD-ON EWD

RAV4 RS3200

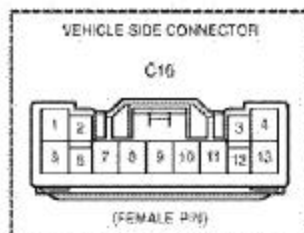
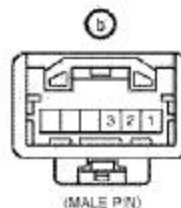
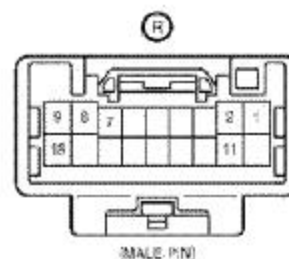
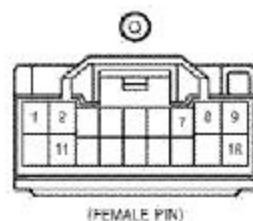
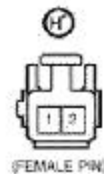
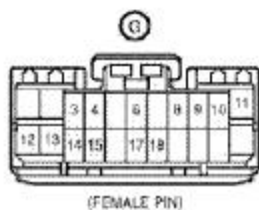
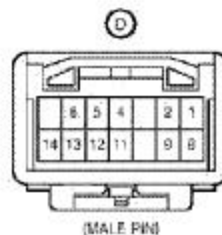
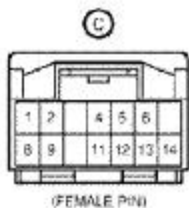


• RAV4 •
RS3200
CONNECTORS

• RAV4.
RS3200 EWD

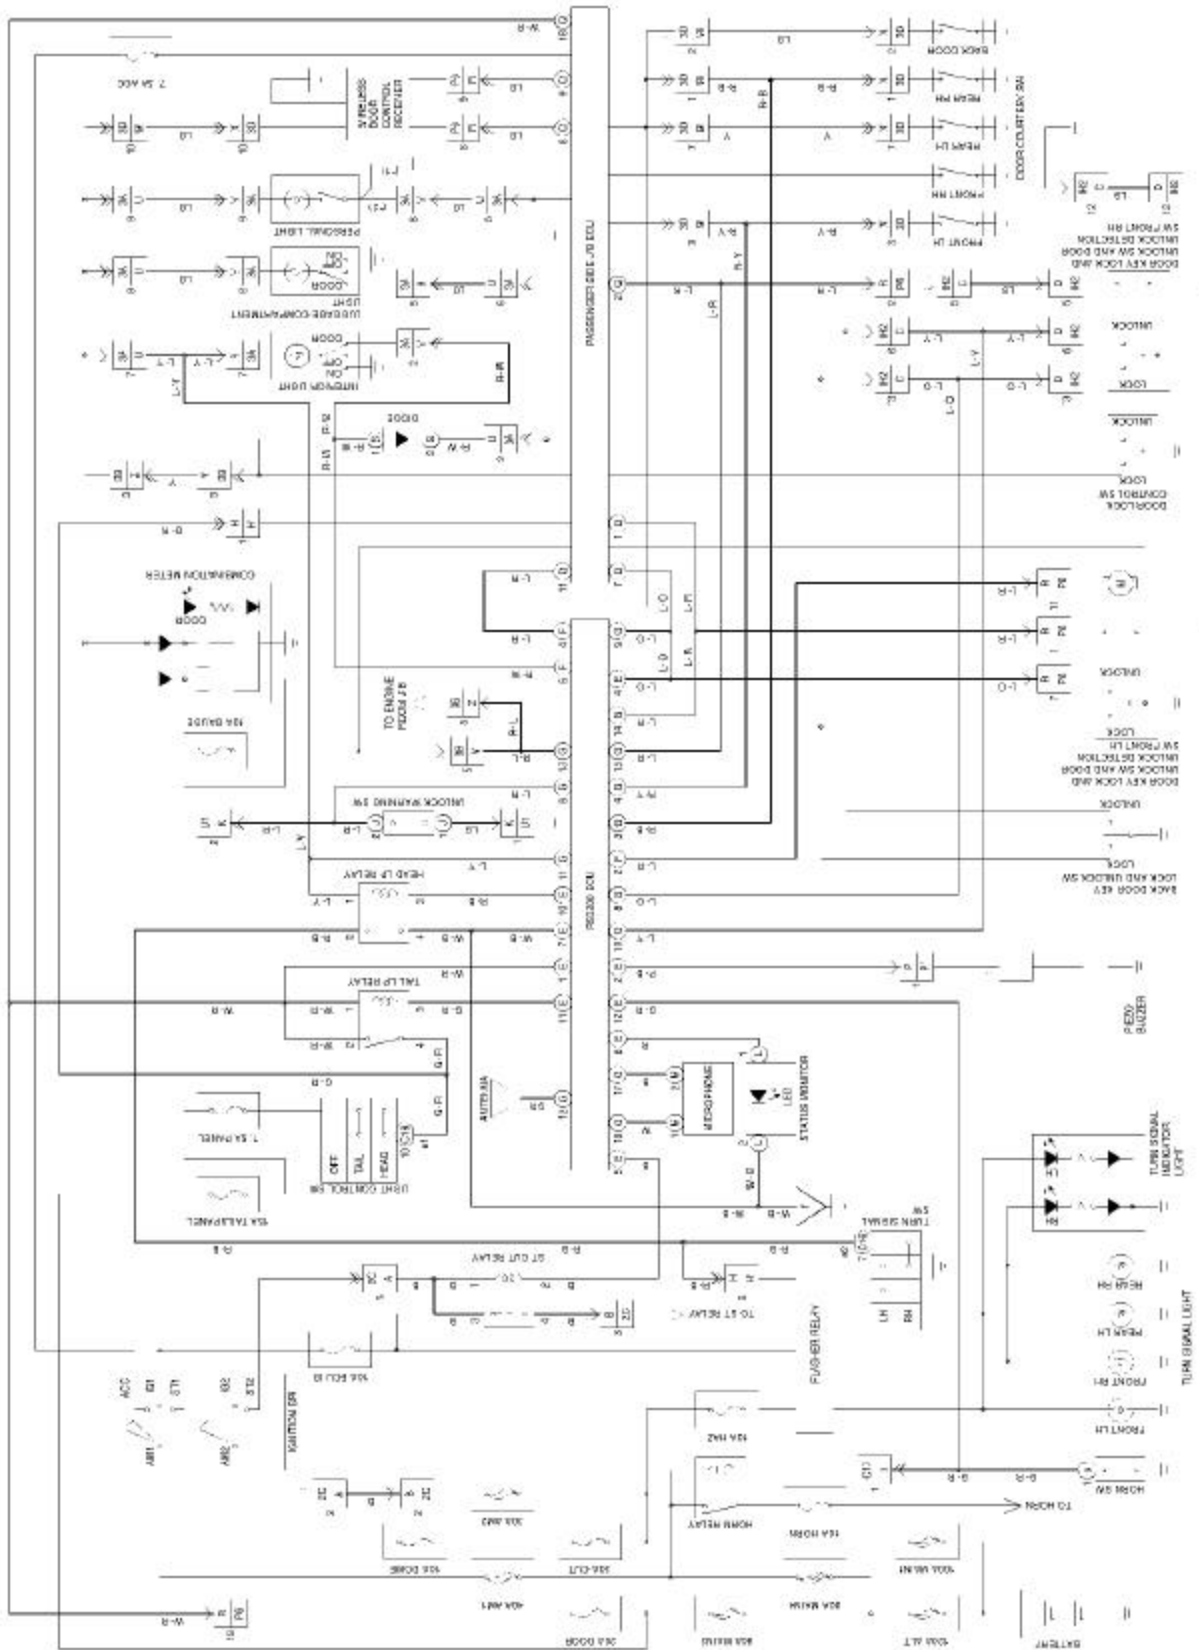

RAV4 RS3200 PLUS

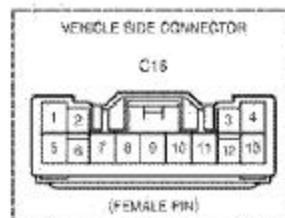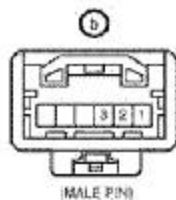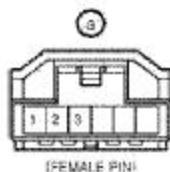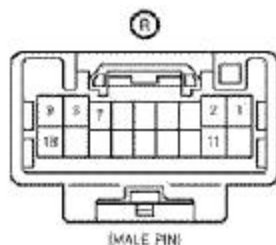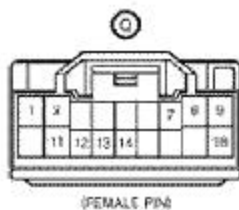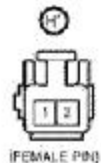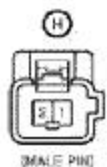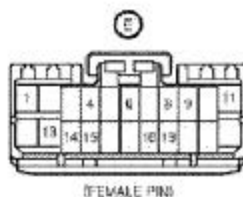

• RAV4 •
RS3200 PLUS
CONNECTORS


[illegible]

• RAV4 •
RS3200 PLUS EWD

SEQUOIA GBS ADD ON















SEQUOIA GBS ADD ON

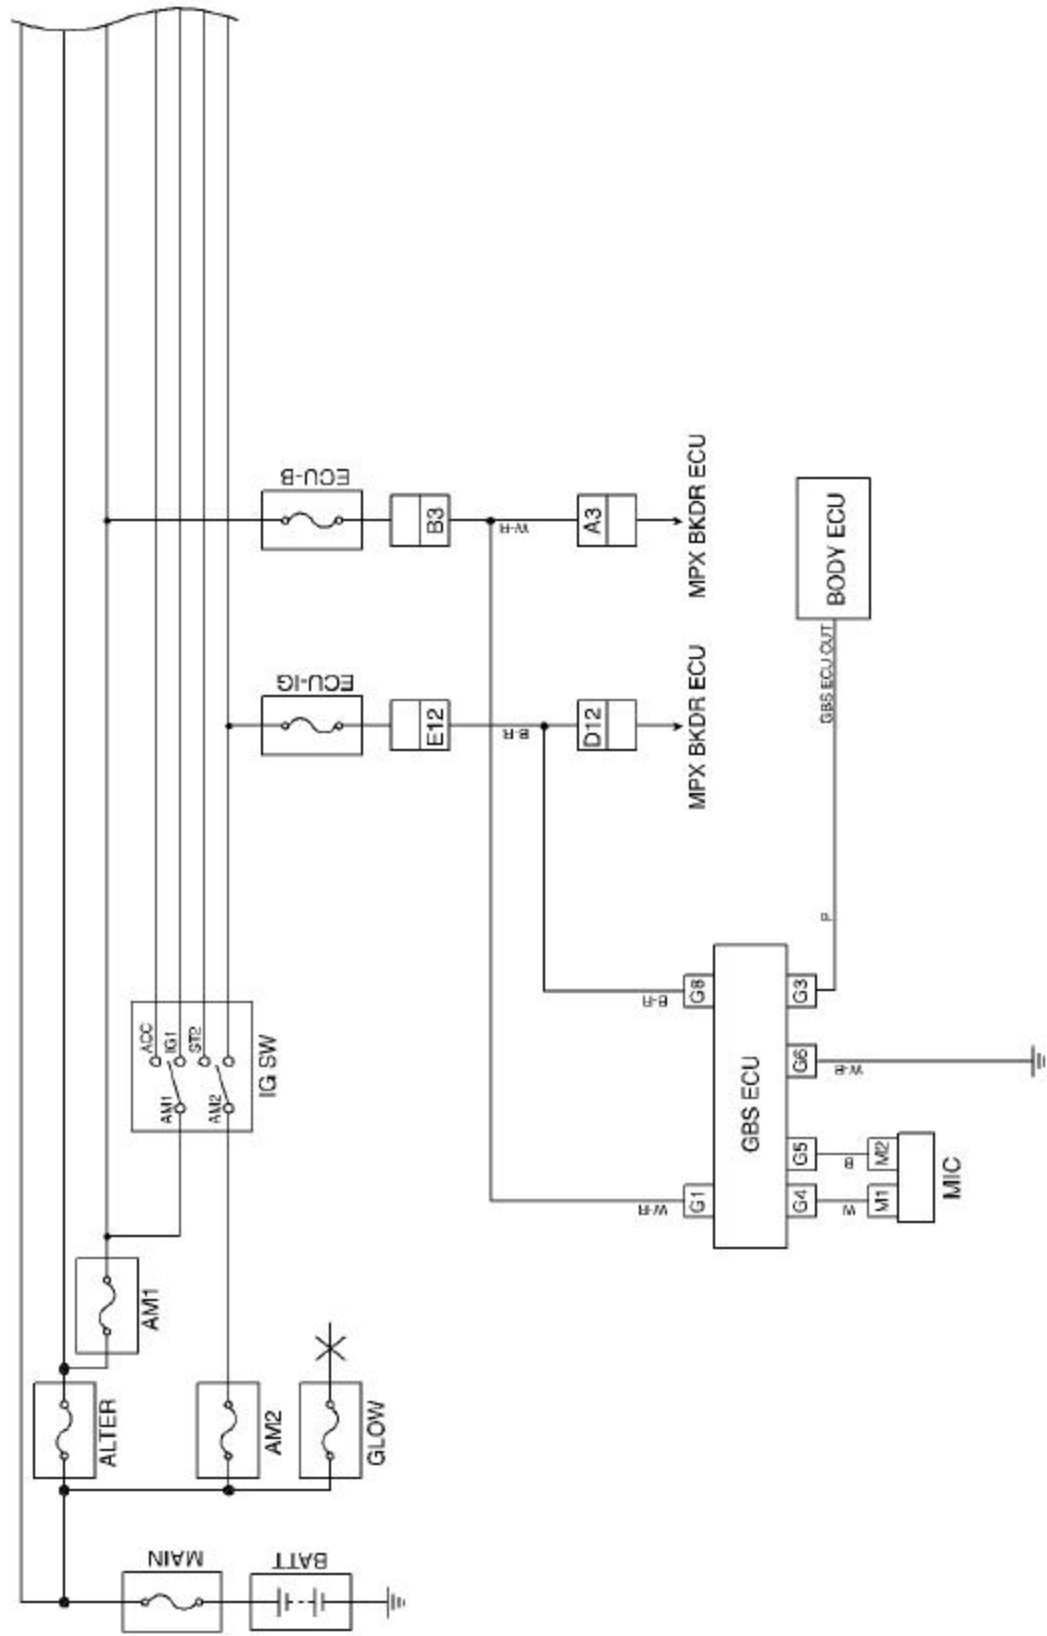

• SEQUOIA •
GBS ADD ON EWD


SOLARA RS3200 PLUS

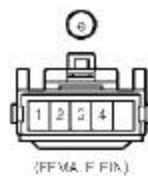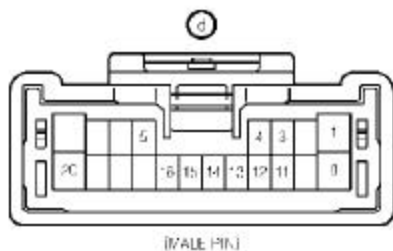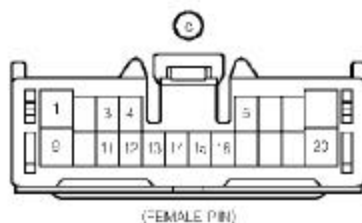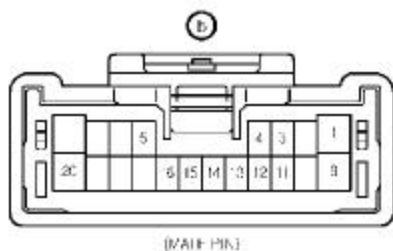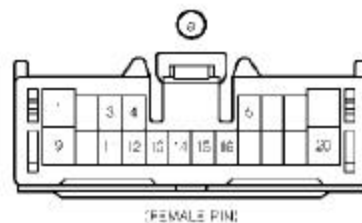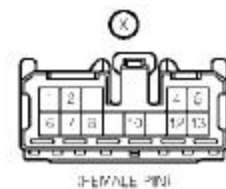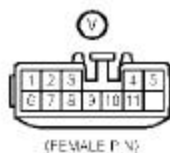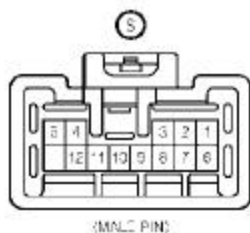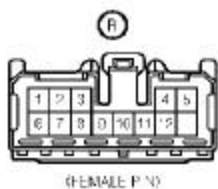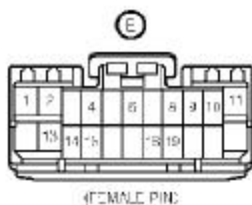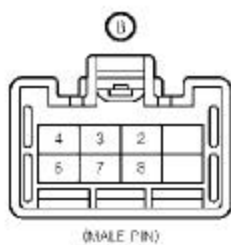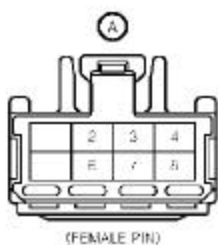


• SOLARA •
RS3200 PLUS EWD

TACOMA RKE/ RS3200 PLUS UPGRADE

• TACOMA •
RKE/RS3200 PLUS
UPGRADE
CONNECTORS

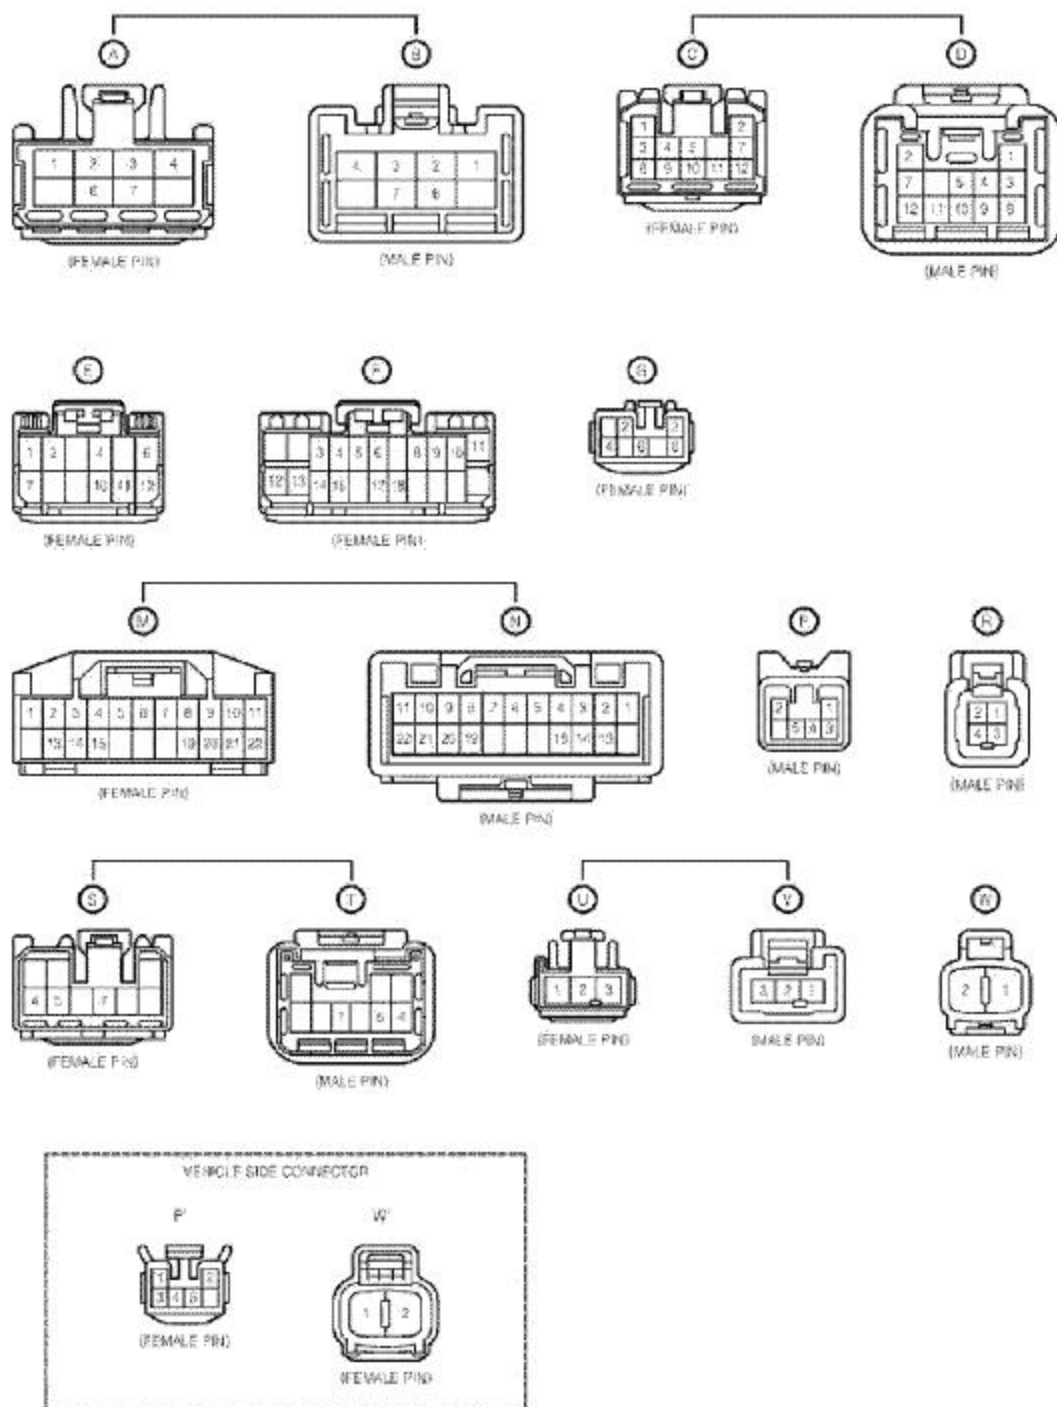

TACOMA RKE/ RS3200 PLUS UPGRADE

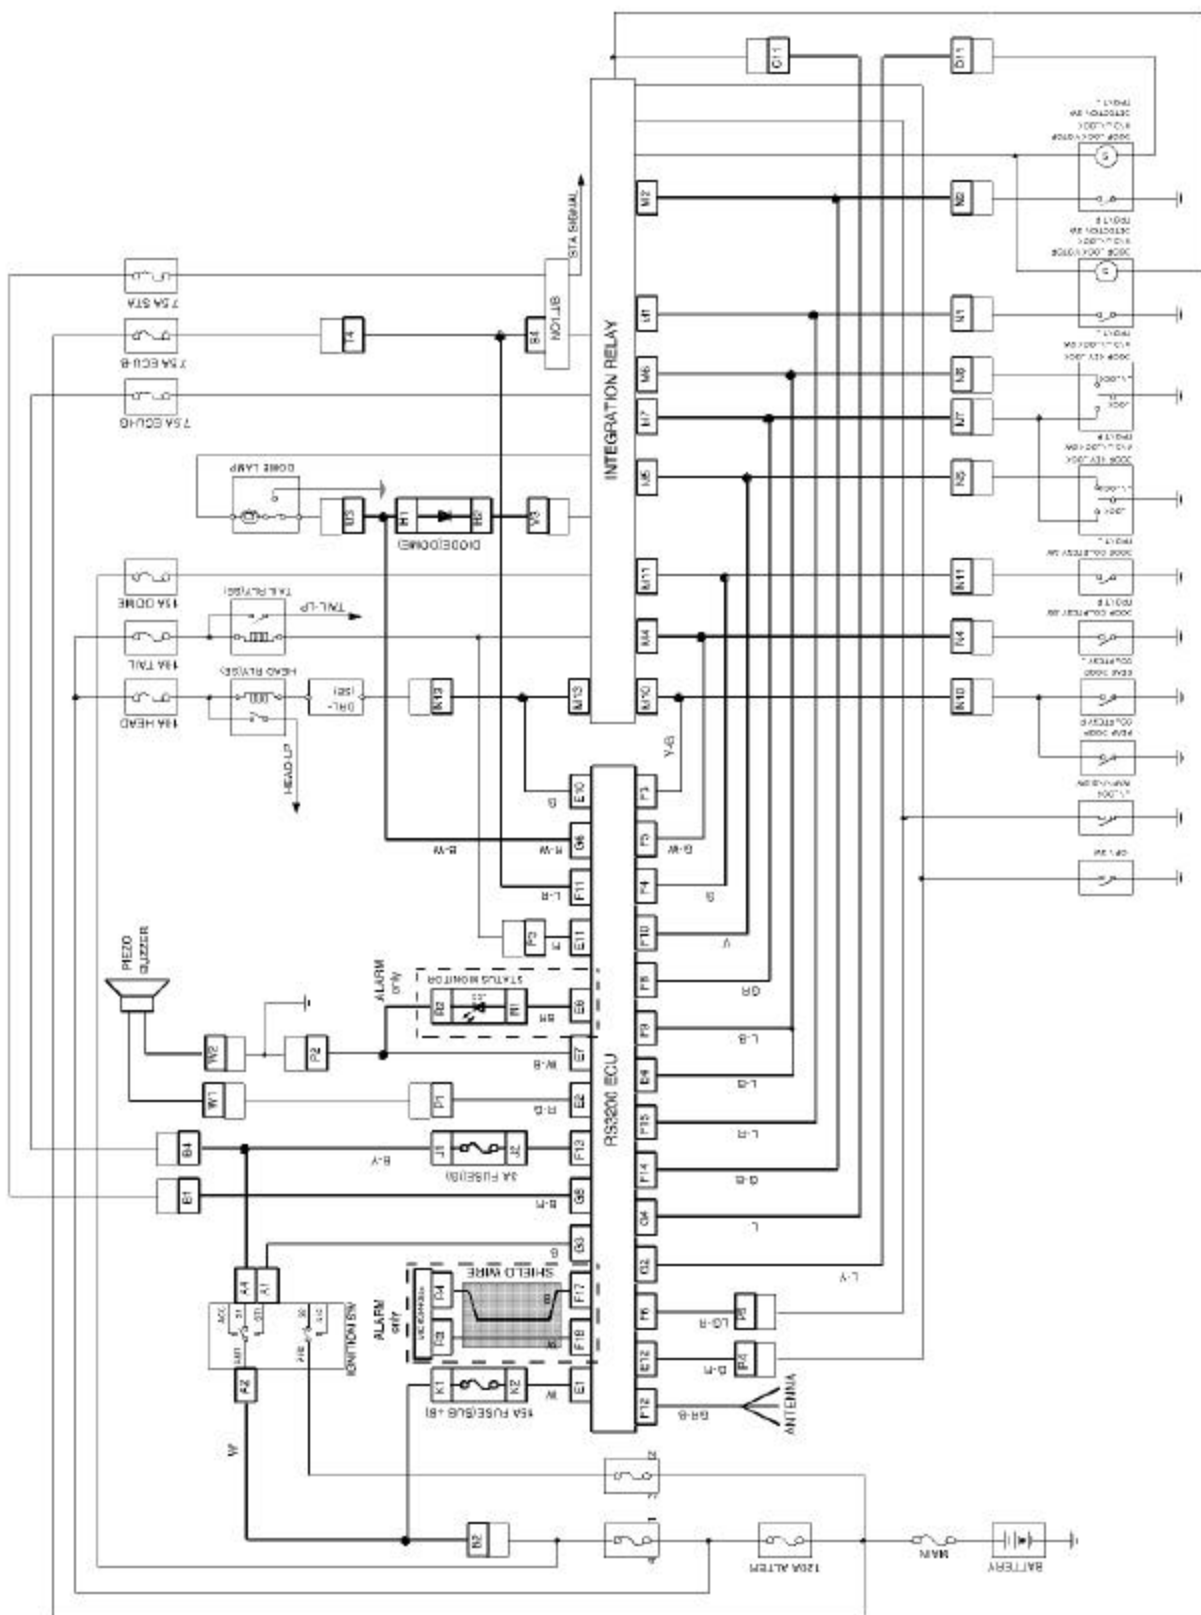

TACOMA •
RKE/RS3200 PLUS
UPGRADE
EWD